

**5090GV, 5090GN, 5090GF, 5090GL,  
5105GV, 5105GN, 5105GF, 5105GL,  
5115GV, 5115GN, and 5115GF (MY22- )  
Tractors**



**JOHN DEERE**

**OPERATOR'S MANUAL**

5090GV, 5090GN, 5090GF, 5090GL, 5105GV, 5105GN, 5105GF,  
5105GL, 5115GV, 5115GN, and 5115GF (MY22- ) Tractors

**OMER582850    ISSUE C4    (ENGLISH)**

**John Deere GmbH & Co. KG  
John Deere Werk Mannheim**

European Edition  
PRINTED IN U.S.A.



# Introduction

---

## Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

# Contents

|                                                            | Page  |                                                                             | Page  |
|------------------------------------------------------------|-------|-----------------------------------------------------------------------------|-------|
| <b>Glossary</b>                                            |       | <b>Tightening Wheel Retaining Bolts/Nuts</b>                                | 05-16 |
| Glossary                                                   | 00-1  | Avoid High-Pressure Fluids                                                  | 05-17 |
| Trademarks                                                 | 00-2  | Do Not Open High-Pressure Fuel System                                       | 05-17 |
| <b>Safety</b>                                              |       | Store Attachments Safely                                                    | 05-17 |
| Recognize Safety Information                               | 05-1  | Decommissioning — Proper Recycling and<br>Disposal of Fluids and Components | 05-17 |
| Understand Signal Words                                    | 05-1  | <b>Safety Decals</b>                                                        |       |
| Follow Safety Instructions                                 | 05-1  | Pictorial Safety Signs                                                      | 05A-1 |
| Prepare for Emergencies                                    | 05-1  | Operator's Manual                                                           | 05A-1 |
| Wear Protective Clothing                                   | 05-2  | No Riders (Foldable ROPS)                                                   | 05A-1 |
| Protect Against Noise                                      | 05-2  | Use Seat Belt Properly (Cab or Fixed ROPS)                                  | 05A-1 |
| Handle Fuel Safely—Avoid Fires                             | 05-2  | Use Seat Belt Properly (Foldable ROPS)                                      | 05A-2 |
| Fire Prevention                                            | 05-2  | ROPS in Normal Position (Foldable ROPS)                                     | 05A-2 |
| In Case of Fire                                            | 05-3  | Hitch Remote Control (Mechanical Hitch)                                     | 05A-2 |
| Avoid Static Electricity Risk When Refueling               | 05-3  | Hitch Remote Control (Electronic Hitch)                                     | 05A-3 |
| Use Foldable ROPS and Seat Belt Properly                   | 05-4  | Accumulator — Front Hitch                                                   | 05A-3 |
| Stay Clear of Rotating Drivelines                          | 05-4  | Accumulator — Front Suspended Axle                                          | 05A-4 |
| Use Steps and Handholds Correctly                          | 05-5  | Pick-Up Hitch                                                               | 05A-4 |
| Read Operator's Manuals for ISOBUS<br>Controllers          | 05-5  | Hydraulic Lines and Hydraulic Components<br>— Rear Hitch                    | 05A-4 |
| Use Seat Belt Properly                                     | 05-5  | Hydraulic Lines and Hydraulic Components<br>— Front Hitch                   | 05A-4 |
| Vibration                                                  | 05-5  | Hydraulic Lines and Hydraulic Components<br>— Front Distributors            | 05A-5 |
| Operating the Tractor Safely                               | 05-6  | <b>Vehicle Overview</b>                                                     |       |
| Avoid Backover Accidents                                   | 05-7  | Product Identification View                                                 | 10-1  |
| Limited Use in Forestry Operation                          | 05-7  | <b>Operator's Manual - General Information</b>                              |       |
| Operating the Loader Tractor Safely                        | 05-7  | Scope of This Manual                                                        | 10A-1 |
| Keep Riders Off Machine                                    | 05-8  | Operator Manual Usage Information                                           | 10A-1 |
| Passenger Seat                                             | 05-8  | Comply with Operator's Manuals of<br>Implement Manufacturers                | 10A-1 |
| Use Safety Lights and Devices                              | 05-8  | Operator Training Required                                                  | 10A-1 |
| Towing Trailers/Implements Safely                          | 05-8  | <b>Operating the Engine</b>                                                 |       |
| Use Caution on Slopes, Uneven Terrain, and<br>Rough Ground | 05-9  | Neutral Start Switch                                                        | 20-1  |
| Freeing a Mired Machine                                    | 05-9  | Starting the Engine                                                         | 20-1  |
| Avoid Contact with Agricultural Chemicals                  | 05-10 | Start with a Booster Battery                                                | 20-4  |
| Handle Agricultural Chemicals Safely                       | 05-10 | Start the Engine with a Slave Battery                                       | 20-4  |
| Handling Batteries Safely                                  | 05-11 | Battery—Disconnect Electrical Circuit                                       | 20-5  |
| Avoid Heating Near Pressurized Fluid Lines                 | 05-12 | Observe Instrument Panel After Starting the<br>Engine                       | 20-7  |
| Remove Paint Before Welding or Heating                     | 05-12 | Engine Oil Pressure Indicator Light                                         | 20-7  |
| Handle Electronic Components and Brackets<br>Safely        | 05-12 | Alternator Indicator Light                                                  | 20-8  |
| Practice Safe Maintenance                                  | 05-13 | Air Cleaner Indicator Light                                                 | 20-8  |
| Avoid Hot Exhaust                                          | 05-13 | Transmission Warning Light                                                  | 20-8  |
| Clean Exhaust Filter Safely                                | 05-13 | Coolant Temperature Gauge                                                   | 20-9  |
| Work In Ventilated Area                                    | 05-14 | Observe Fuel Level                                                          | 20-10 |
| Support Machine Properly                                   | 05-14 | Fill Fuel Tank                                                              | 20-10 |
| Prevent Machine Runaway                                    | 05-15 | Fill DEF (Diesel Exhaust Fluid) Tank                                        | 20-11 |
| Park Machine Safely                                        | 05-15 |                                                                             |       |
| Transport Tractor Safely                                   | 05-15 |                                                                             |       |
| Service Cooling System Safely                              | 05-15 |                                                                             |       |
| Service Accumulator Systems Safely                         | 05-16 |                                                                             |       |
| Service Tires Safely                                       | 05-16 |                                                                             |       |
| Service Front-Wheel Drive Tractor Safely                   | 05-16 |                                                                             |       |

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2024  
John Deere GmbH & Co. KG Mannheim Regional Center  
Zentralfunktionen  
All rights reserved.  
Previous Editions  
Copyright © 2022, 2023

|                                                 | Page   |                                               | Page  |
|-------------------------------------------------|--------|-----------------------------------------------|-------|
| Change Engine Speeds .....                      | 20-12  | Chock Block .....                             | 50C-5 |
| Warm up the Engine .....                        | 20-13  |                                               |       |
| Restart a Stalled Engine .....                  | 20-13  | <b>Transmission - General Information</b>     |       |
| Engines with Turbocharger .....                 | 20-13  | Reduce Fuel Consumption .....                 | 50D-1 |
| Avoid Idling the Engine .....                   | 20-13  | Travel Speeds (Cab) .....                     | 50D-2 |
| Observe Engine Work and Idle Speeds .....       | 20-14  | Travel Speeds (Open Operator Platform) .....  | 50D-4 |
| Stop the Engine .....                           | 20-14  | Use Caution on Slopes, Uneven Terrain, and    |       |
| Park the Tractor .....                          | 20-15  | Rough Ground .....                            | 50D-5 |
|                                                 |        | Select a Gear .....                           | 50D-6 |
| <b>Cold Weather Operation</b>                   |        | Cruise Control .....                          | 50D-6 |
| Cold-Weather Operation .....                    | 20A-1  | Cruise Control Information (Cab) .....        | 50D-7 |
|                                                 |        | Manually Adjust the Engine Speed Memories     |       |
| <b>Aftertreatment Equipment (DOC/DPF/</b>       |        | MEM1 / MEM2 (Optional) .....                  | 50D-8 |
| <b>SCRoF)</b>                                   |        |                                               |       |
| DEF Warning Messages .....                      | 20B-1  | <b>PowrReverser™ Transmission</b>             |       |
| DEF Failure Warning .....                       | 20B-1  | Shifting Transmission .....                   | 50E-1 |
| DEF Level Warning .....                         | 20B-2  | Electro-Hydraulic Hi-Lo (If Equipped) .....   | 50E-1 |
| Poor DEF Quality Warning .....                  | 20B-5  | Operate Transmission Shift Levers .....       | 50E-2 |
| SCRoF System Failures/Tampering Warning ....    | 20B-6  |                                               |       |
| EGR Failures .....                              | 20B-7  | <b>Mechanical Transmission</b>                |       |
| Aftertreatment General Warning (Tractor with    |        | Shifting Transmission .....                   | 50L-1 |
| SCRoF System) .....                             | 20B-8  | Mechanical Hi-Lo .....                        | 50L-1 |
| Aftertreatment General Warning (Tractor         |        | Operate Transmission Shift Levers .....       | 50L-2 |
| without SCRoF System) .....                     | 20B-8  |                                               |       |
| Engine Particulate Filter (DPF) .....           | 20B-8  | <b>Suspended Front Axle</b>                   |       |
| DPF Soot Load, General Information .....        | 20B-10 | Right-Hand Cab Post Controls .....            | 50M-1 |
|                                                 |        | System Start-Up and Suspension System         |       |
| <b>Controls</b>                                 |        | Mode .....                                    | 50M-1 |
| Vehicle Controls (Open Operator Platform) ..... | 30-1   |                                               |       |
| Vehicle Controls (Cab) .....                    | 30-3   | <b>Variable Ratio Steering (Cab)</b>          |       |
| Vehicle Controls (Mechanical Transmission)      |        | Variable Ratio Steering (Cab) .....           | 50N-1 |
| (Cab) .....                                     | 30-4   |                                               |       |
| Vehicle Controls (PowrReverser                  |        | <b>Headland Management System (HMS) (Cab)</b> |       |
| Transmission) (Cab) .....                       | 30-6   | Headland Management System (HMS) (Cab) ...    | 50P-1 |
| Vehicle Controls .....                          | 30-7   |                                               |       |
|                                                 |        | <b>AutoClutch Controls (Cab)</b>              |       |
| <b>Instrument Panel</b>                         |        | AutoClutch Controls (Cab) .....               | 50Q-1 |
| Instruments and Indicator Lights (Cab) .....    | 30A-1  |                                               |       |
| Instruments and Indicator Lights (Open          |        | <b>PTO Shaft and Hitch</b>                    |       |
| Operator Platform) .....                        | 30A-2  | Maximum Lifting Force .....                   | 60-1  |
|                                                 |        |                                               |       |
| <b>Digital Display</b>                          |        | <b>PTO Shaft - General Information</b>        |       |
| Digital Display (Cab) .....                     | 30B-1  | Front PTO — PTO Shield .....                  | 60A-1 |
| Digital Display (Open Operator Platform) .....  | 30B-9  | PTO Guard .....                               | 60A-1 |
|                                                 |        | Operating Instructions .....                  | 60A-2 |
| <b>Drive Train</b>                              |        | PTO Automatic Shutoff Function .....          | 60A-2 |
| Drive Train - Overview .....                    | 50-1   | Selecting PTO Speeds .....                    | 60A-3 |
|                                                 |        | Attaching PTO-Driven Implement .....          | 60A-3 |
| <b>Front-Wheel Drive</b>                        |        |                                               |       |
| Operate Front-Wheel Drive (Open Operator        |        | <b>Front PTO</b>                              |       |
| Platform) .....                                 | 50A-1  | Front PTO .....                               | 60B-1 |
| Operate Front-Wheel Drive (Cab) .....           | 50A-2  |                                               |       |
| Set Steering Angle (Auto 4WD) (Cab) .....       | 50A-4  | <b>Rear PTO</b>                               |       |
| Activation of Auto 4WD (Cab) .....              | 50A-5  | Operating the Rear PTO (Mechanical            |       |
|                                                 |        | Version) .....                                | 60C-1 |
| <b>Differential Lock</b>                        |        | Operating the Rear PTO (Electrohydraulic      |       |
| Use Differential Lock .....                     | 50B-1  | Version) .....                                | 60C-3 |
|                                                 |        | Selecting Ground Drive PTO .....              | 60C-4 |
| <b>Brakes</b>                                   |        | Ground Drive PTO Revolution Speeds .....      | 60C-6 |
| Use Brakes .....                                | 50C-1  |                                               |       |
| Stop the Tractor .....                          | 50C-1  |                                               |       |
| Hydraulic Trailer Brakes .....                  | 50C-3  |                                               |       |

|                                                                      | Page   |                                                                                                                             | Page   |
|----------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------------------------------------------------|--------|
| <b>Front Hitch</b>                                                   |        | Connect Hose Under Pressure .....                                                                                           | 70A-1  |
| Front Hitch .....                                                    | 60D-1  | <b>Selective Control Valves - Controls</b>                                                                                  |        |
| Front Implement Fixing Points .....                                  | 60D-3  | Selective Control Valve (SCV) Levers .....                                                                                  | 70B-1  |
| <b>Rear Hitch</b>                                                    |        | Control Lever and Coupler Identification .....                                                                              | 70B-2  |
| 3-Point Hitch Components .....                                       | 60E-1  | Electrically-Actuated Selective Control Valve<br>(Cab) (If Equipped) .....                                                  | 70B-4  |
| Match Tractor Power to Implement .....                               | 60E-2  | Electrically-Actuated Selective Control Valve<br>(Cab) (If Equipped) .....                                                  | 70B-8  |
| Hitch Control Levers (Mechanical Hitch) .....                        | 60E-2  | <b>Selective Control Valves - Settings</b>                                                                                  |        |
| Use Hitch Position Control (Mechanical<br>Hitch) .....               | 60E-2  | Double/Single-Acting SCVs Conversion .....                                                                                  | 70C-1  |
| Use Draft Control (Mechanical Hitch) .....                           | 60E-3  | Flow Divider Valve .....                                                                                                    | 70C-1  |
| Adjust Rate-of-Drop .....                                            | 60E-4  | Flow Regulator Valve/Flow Control .....                                                                                     | 70C-1  |
| Prepare the Implement .....                                          | 60E-5  | Remote Hydraulic Cylinders .....                                                                                            | 70C-2  |
| Converting Category II Hitch to Category IN<br>or Category I .....   | 60E-6  | <b>Wheels and Tires</b>                                                                                                     |        |
| Position Draft Link Ends .....                                       | 60E-6  | Service Tires Safely .....                                                                                                  | 80-1   |
| Quick-Coupling (Hook-Type) Draft Links .....                         | 60E-6  | Changing Wheels Safely .....                                                                                                | 80-1   |
| Attaching Implements .....                                           | 60E-7  | Check Implement-to-Tire Clearance .....                                                                                     | 80-2   |
| Attach Implements to 3-Point Hitch .....                             | 60E-7  | Tire Pressures .....                                                                                                        | 80-2   |
| Adjust Sway Blocks .....                                             | 60E-8  | Mounting Tires .....                                                                                                        | 80-2   |
| 3-Point Hitch Leveling System (If Equipped) ....                     | 60E-9  | Tire Combinations (Cab) .....                                                                                               | 80-2   |
| Position the Center Link .....                                       | 60E-9  | Tire Combinations (Open Operator Platform) .....                                                                            | 80-6   |
| Level the Hitch .....                                                | 60E-9  | <b>Front Wheels, Tires, and Treads</b>                                                                                      |        |
| Adjust Hitch Control Lever Friction .....                            | 60E-10 | Tighten Wheel Bolts .....                                                                                                   | 80A-1  |
| Match Tractor Power to Implement (Electro-<br>Hydraulic Hitch) ..... | 60E-11 | Adjusting Front Axle Tread Width .....                                                                                      | 80A-1  |
| Maximum Lifting Force (Electro-Hydraulic<br>Hitch) .....             | 60E-11 | Check Toe-In .....                                                                                                          | 80A-1  |
| Hitch Control (Electro-Hydraulic Hitch) .....                        | 60E-11 | Adjust Toe-In .....                                                                                                         | 80A-2  |
| Neutral Position (Electro-Hydraulic Hitch) .....                     | 60E-12 | Direction of Tire Rotation .....                                                                                            | 80A-2  |
| Position Matching Function (Electro-<br>Hydraulic Hitch) .....       | 60E-12 | Tread Adjustment (Cab) .....                                                                                                | 80A-2  |
| Adjust Raising Speed Limit (Electro-<br>Hydraulic Hitch) .....       | 60E-13 | Tread Adjustment (Open Operator Platform) ...                                                                               | 80A-10 |
| Adjust Lowering Speed Limit (Electro-<br>Hydraulic Hitch) .....      | 60E-13 | <b>Steering Stop and Fender - Settings</b>                                                                                  |        |
| Adjust Height Limit (Electro-Hydraulic Hitch) ...                    | 60E-13 | Steering Angle Adjustment .....                                                                                             | 80B-1  |
| Position Control Mode (Electro-Hydraulic<br>Hitch) .....             | 60E-14 | <b>Rear Wheels, Tires, and Treads</b>                                                                                       |        |
| Float Control Mode (Electro-Hydraulic Hitch) ...                     | 60E-14 | Tighten Rear Wheel Nuts and Bolts .....                                                                                     | 80C-1  |
| Fast Dig In (Electro-Hydraulic Hitch) .....                          | 60E-15 | Observe Rear Wheel Tread Width Limitations<br>(Open Operator Platform) .....                                                | 80C-1  |
| Hitch Remote Control (Electro-Hydraulic<br>Hitch) .....              | 60E-15 | Tread Adjustment (Cab) .....                                                                                                | 80C-2  |
| Transport Control Mode (Electro-Hydraulic<br>Hitch) .....            | 60E-16 | Tread Adjustment (Open Operator Platform) ....                                                                              | 80C-5  |
| Draft Control Mode (Electro-Hydraulic Hitch) ...                     | 60E-16 | <b>Operator's Station and Cab</b>                                                                                           |        |
| Adjust Draft Control (Electro-Hydraulic Hitch) ...                   | 60E-17 | Cab Classification According to EN 15695-1<br>(for Application of Crop Protection<br>Chemicals and Liquid Fertilizer) ..... | 90-1   |
| Using Draft Control (Electro-Hydraulic Hitch) ...                    | 60E-18 | Roll-Over Protective Structure .....                                                                                        | 90-1   |
| Error Control Mode (Electro-Hydraulic Hitch) ...                     | 60E-19 | Emergency Exits .....                                                                                                       | 90-2   |
| <b>Coupling Devices</b>                                              |        | Clean Vehicle of Hazardous Pesticides .....                                                                                 | 90-2   |
| Drawbar .....                                                        | 60F-1  | Handle Agricultural Chemicals Safely .....                                                                                  | 90-2   |
| Proper Use of Drawbar .....                                          | 60F-1  | Avoid Contact with Agricultural Chemicals .....                                                                             | 90-3   |
| Height Adjustable Trailer Hitches .....                              | 60F-1  | Operating Roll-Over Protective Structure .....                                                                              | 90-3   |
| Pick-Up Hitch .....                                                  | 60F-2  | Use the Seat Belt .....                                                                                                     | 90-4   |
| Pick-Up Hitch Decal .....                                            | 60F-3  | Fuse Box .....                                                                                                              | 90-5   |
| Tow the Tractor .....                                                | 60F-3  | <b>Seat Adjustment</b>                                                                                                      |        |
| <b>Hydraulic System</b>                                              |        | Seat Adjustment .....                                                                                                       | 90A-1  |
| Maximum Permissible Oil Withdrawal .....                             | 70-1   | <b>Category 4 Air Filtration System (Cab)</b>                                                                               |        |
| <b>Hydraulic Connections</b>                                         |        | Follow Safety Instruction .....                                                                                             | 90B-1  |
| Use Correct Hose Tips .....                                          | 70A-1  |                                                                                                                             |        |
| Connecting Cylinder Hoses .....                                      | 70A-1  |                                                                                                                             |        |