

1023E and 1025R Compact Utility Tractors (Serial No. NP000001-) (North America)



JOHN DEERE

OPERATOR'S MANUAL

1023E, 1025R Compact Utility Tractors (North America)

OMTR135770 ISSUE E3 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

John Deere Augusta Works

North America Edition
PRINTED IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

Contents

	Page		Page
General Information		Transport Tractor Safely	00A-16
Product View	00-1	Service Cooling System Safely	00A-16
Trademarks	00-1	Service Accumulator Systems Safely	00A-17
Glossary of Terms	00-2	Service Tires Safely	00A-17
Regions and Country Versions	00-2	Service Front-Wheel Drive Tractor Safely	00A-17
Machine Overview	00-3	Tightening Wheel Retaining Bolts/Nuts	00A-17
Safety		Avoid High-Pressure Fluids	00A-18
Recognize Safety Information	00A-1	Do Not Open High-Pressure Fuel System	00A-18
Understand Signal Words	00A-1	Store Attachments Safely	00A-18
Follow Safety Instructions	00A-1	Decommissioning — Proper Recycling and	
Prepare for Emergencies	00A-1	Disposal of Fluids and Components	00A-18
Wear Protective Clothing	00A-2	Safety Signs	
Protect Against Noise	00A-2	Replace Safety Signs	00B-1
Handle Fuel Safely—Avoid Fires	00A-2	Use Seat Belt Properly - OOS	00B-1
Handle Starting Fluid Safely	00A-2	Use Seat Belt Properly - Cab	00B-2
Fire Prevention	00A-3	Operator's Manual	00B-2
In Case of Fire	00A-3	Folding ROPS	00B-3
Avoid Static Electricity Risk When Refueling	00A-4	Canopy or Sunshade	00B-3
Keep ROPS Installed Properly	00A-4	Rotating Blades	00B-3
Use Foldable ROPS and Seat Belt Properly	00A-4	PTO Shield	00B-4
Stay Clear of Rotating Drivelines	00A-5	Starter	00B-4
Use Steps and Handholds Correctly	00A-5	Controls and Instruments	
Read Operator's Manuals for ISOBUS		Front Console Controls	10-1
Controllers	00A-6	Foot-Operated Controls	10-2
Use Seat Belt Properly	00A-6	Right-Hand Console Controls	10-3
Operating the Tractor Safely	00A-6	Left-Hand Console Controls	10-4
Avoid Backover Accidents	00A-7	Differential, MFWD, Rate-of-Drop, and Seat	
Limited Use in Forestry Operation	00A-7	Controls	10-5
Operating the Loader Tractor Safely	00A-8	Instrument Control Panel	10-6
Keep Riders Off Machine	00A-8	Cab Controls (If Equipped)	10-7
Instructional Seat	00A-8	Engine Operation	
Use Safety Lights and Devices	00A-9	Operate Key Switch	20-1
Use a Safety Chain	00A-9	Operate Hand Throttle	20-1
Transport Towed Equipment at Safe Speeds	00A-9	Operate Fuel Shutoff Valve	20-1
Use Caution on Slopes, Uneven Terrain, and		Start the Engine	20-1
Rough Ground	00A-10	Cold Weather Starting Aids	20-2
Freeing a Mired Machine	00A-10	Warm and Idle the Engine	20-2
Avoid Contact with Agricultural Chemicals	00A-11	To Start a Stalled Engine	20-3
Handle Agricultural Chemicals Safely	00A-11	Stop Engine	20-3
Handling Batteries Safely	00A-12	Air Intake, Fuel, Coolant, and Exhaust	
Avoid Heating Near Pressurized Fluid Lines	00A-13	Operation	
Remove Paint Before Welding or Heating	00A-13	Fill the Fuel Tank	30-1
Handle Electronic Components and Brackets		Use Fuel Gauge	30-1
Safely	00A-13	Electrical and Lighting Operation	
Practice Safe Maintenance	00A-14	Use Light Switch	40-1
Avoid Hot Exhaust	00A-14	Use Turn Signal Switch	40-1
Clean Exhaust Filter Safely	00A-14		
Work In Ventilated Area	00A-15		
Support Machine Properly	00A-15		
Prevent Machine Runaway	00A-16		
Park Machine Safely	00A-16		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2023
DEERE & COMPANY
Moline, Illinois
All rights reserved.
Previous Editions
Copyright © 2022

Contents

	Page		Page
Work Light (If Equipped)	40-1	Tire Combinations	80-3
Beacon Light (If Equipped)	40-1	Front and Rear Tire Capacity	80-3
Drivetrain Operation		Ballast	
Drive Machine	50-1	Ballast Machine	80A-1
Transmission Operation		Implement Codes	80A-1
Operate the Hydrostatic Transmission	50A-1	Use Optional Rear Cast Iron Wheel Weights	80A-1
Use Cruise Control (If Equipped)	50A-1	Use Optional Rear Ballast Box	80A-1
MFWD and Front Axle Operation		Use Liquid Weight in Tires	80A-1
Use Mechanical Front Wheel Drive (MFWD)	50B-1	Use Optional Front Weights	80A-2
Differential and Rear Axle Operation		Additional Equipment Operation	
Use Differential Lock (Traction Assist)	50C-1	Additional Equipment Operation	80B-1
Power Take Off (PTO) Operation		Operator Station Operation	
Stay Clear of Rotating Drivelines	50D-1	Enter and Exit Machine	90-1
Use the PTO Safely	50D-1	Adjust Seat	90-1
Check PTO Driveshaft Length	50D-2	Use Seat Belt	90-1
Operate Rear and Mid PTO (Operator on Seat)	50D-2	Raise and Lower ROPS	90-1
Operate Rear PTO (Operator off Seat)	50D-3	Doors	90-2
Operate Reverse Implement Option (RIO)	50D-4	Windows	90-2
Adjust Height-of-Cut (If Equipped)	50D-4	Cab Heater Control	90-3
Steering and Brake Operation		Front Windshield Wiper	90-3
Operate Brake Pedal	60-1	Rear Windshield Wiper (If Equipped)	90-4
Operate Park Brake	60-1	Transport and Storage	
Adjust Tilt Steering Wheel (If Equipped)	60-1	Transport Machine on Trailer	100-1
Hydraulics Operation		Transport Machine	100-1
Warm Hydraulic System Oil	70-1	Push or Tow Machine	100-1
Hydraulics Information	70-1	Tow Loads	100-2
Hitch and Drawbar Operation		Use Safety Chain	100-2
Operate Attachments	70A-1	Store Safety	100-2
Operate 3-Point Hitch	70A-1	Prepare Machine for Storage	100-2
Operate Rate-of-Drop	70A-1	Prepare Fuel and Engine for Storage	100-3
Use Draft Link and Center Link	70A-2	Remove Machine from Storage	100-3
Level Implement Front-to-Rear	70A-2	Maintenance Intervals	
Level Implement Side-to-Side	70A-2	Service Your Machine	200-1
Adjust Implement Side-to-Side Sway	70A-3	Service Interval Charts	200-1
Operate Rear Hitch	70A-3	Service Interval Charts	200-1
Use Front 3-Point Hitch (If equipped)	70A-3	Test the Safety Interlock System Before Startup	200-2
Operate Optional iMatch Quick-Attach Hitch System	70A-7	Avoid Damage to Plastic and Painted Surfaces	200-3
Selective Control Valve Operation		Clean Plastic Surfaces	200-3
Avoid High-Pressure Fluids	70B-1	Clean and Repair Metal Surfaces	200-4
Connect Implement Hydraulic Hoses	70B-1	Fuel, Lubricants, and Coolant	
Operate Hydraulic Dual Selective Control Valve (SCV)	70B-1	Diesel Fuel	200A-1
Operate Selective Control Valve (SCV) Lock Lever	70B-2	Handling and Storing Diesel Fuel	200A-1
Operate Third Function Selective Control Valve (If Equipped)	70B-2	Testing Diesel Fuel	200A-2
Wheels and Tires Operation		Minimizing the Effect of Cold Weather on Diesel Engines	200A-2
Tire Labeling, Ascertain the Load Capacity of Tires	80-1	Alternative and Synthetic Lubricants	200A-3
Select Tire Inflation Pressure	80-2	Engine Oil	200A-3
		Diesel Engine Coolant	200A-3
		Operating in Warm Temperature Climates	200A-4
		Additional Information About Diesel Engine Coolants and John Deere COOL-GARD™ II Coolant Extender	200A-4
		Testing Diesel Engine Coolant	200A-5
		Transmission and Hydraulic Oil	200A-5
		Front Axle and MFWD Oil	200A-6

	Page		Page
Grease	200A-6	Power Take Off (PTO) Maintenance	
Maintenance—As Required		PTO Maintenance	250D-1
Service—As Required	200B-1	Steering and Brake Maintenance	
Controls and Instruments Maintenance		Steering Maintenance	260-1
Controls and Instruments Maintenance	210-1	Brake Maintenance	260-1
Engine Maintenance		Hydraulics Maintenance	
Daily Startup Procedure	220-1	Hydraulic Maintenance	270-1
Required Emission-Related Information	220-1	Hitch and Drawbar Maintenance	
Avoid Fumes	220-1	Lubricate 3-Point Hitch	270A-1
Check Engine Oil Level	220-1	Selective Control Valve Maintenance	
Change Engine Oil and Filter	220-2	Check Selective Control Valve	270B-1
Clean Dust Unloading Valve	220-3	Wheels and Tires Maintenance	
Service the Alternator Belt	220-3	Check Wheel Bolts and Hardware	280-1
Clean Front and Side Grille Screens	220-4	Remove and Install Wheels	280-1
Clean Engine Compartment	220-4	Check Tire Pressure	280-1
Air, Fuel, Coolant and Exhaust Maintenance		Tire Inflation Pressure Chart	280-1
Service Air Filter Elements	230-1	Select Front Tire Rolling Direction	280-2
Service Cab Air Filter	230-1	Lift Points for Jacking up the Tractor	280-2
Check Air Filter Hose	230-2	Ballast Maintenance	
Check and Drain Water Separator	230-2	Match Ballast to Work Load	280A-1
Replace Fuel Filter	230-3	Additional Equipment Maintenance	
Fuel Injection Pump	230-4	Additional Equipment Maintenance	280B-1
Fuel Injection Nozzles	230-4	Operator Station Maintenance	
Drain and Flush Fuel Tank	230-4	Raise and Lower Hood	290-1
Check Coolant Level	230-4	Remove and Install Side Panels	290-1
Drain and Flush Cooling System	230-4	Inspect ROPS for Loose Hardware	290-2
Fill Cooling System	230-5	Troubleshooting	
Check Radiator Hoses and Clamps	230-6	Engine	300-1
Clean Radiator, Fuel, and Transmission		Electrical System	300-3
Cooling Fins	230-6	Machine	300-4
Electrical and Lighting Maintenance		Brakes	300-6
Service Electrical	240-1	Steering	300-6
Service the Battery Safely	240-1	On-Board Diagnostics	
Remove and Install Battery	240-1	Service Alert and Information Display	300A-1
Clean Battery and Terminals	240-2	Specifications	
Use Booster Battery	240-2	Engine Specifications	400-1
Replace Headlight Bulb	240-2	Drivetrain Specifications	400-1
Replace Tail/Turn Light Bulb	240-3	Hydraulic System Specifications	400-1
Replace Warning Light Bulb	240-3	Electrical System Specifications	400-2
Replace Fuses and Relays	240-4	Fluid Capacities	400-2
Drivetrain Maintenance		Ground Speeds	400-2
Drivetrain Maintenance	250-1	Dimensions	400-2
Transmission Maintenance		Height from Ground	400-2
Check Transmission Oil Level	250A-1	Ground Clearance	400-3
Change Transmission Oil and Filter	250A-1	Turning Radius	400-3
Remove and Install Oil Suction Screen	250A-2	Machine Weight	400-3
MFWD and Front Axle Maintenance		3-Point Hitch Specification	400-3
Check Front Axle Oil Level	250B-1	Coupling Devices	400-3
Change Front Axle Oil	250B-1	How to Calculate Maximum Permissible	
Lubricate MFWD Driveshaft	250B-2	Download on Trailer Hitch	400-4
Lubricate Main Driveshaft	250B-2		
Differential and Rear Axle Maintenance			
Rear Axle	250C-1		