

**Z910A, Z920A, Z925A,  
Z925A EFI, Z930A, Z950A,  
Z960A and Z970A ZTrak™  
Mower**

**TECHNICAL MANUAL  
Z910A, Z920A, Z925A,  
Z925A EFI, Z930A, Z950A,  
Z960A and Z970A  
ZTrak™ Mowers**


**TM109119 06OCT21 (ENGLISH)**

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-15APR14-1/1

Preview Only

# Contents

## Section 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuel and Lubricant
- Group 20—Machine Specifications

## Section 20—Engine Repair, Kawasaki

- Group 05—General Repair FX651V, FX730V, FX751V, FX801V, and FX850V
- Group 10—Repair FX651V and FX730V
- Group 15—Repair FX751V, FX801V, and FX850V
- Group 25—Repair FX921V and FX1000V

## Section 25—Engine Repair, Kohler EFI

- Group 05—Repair

## Section 30—Electrical Repair

- Group 10—Component Location
- Group 20—Wire Harness—Standard (Z910A, Z920A, Z925A, Z930A, Z950A) (SN -020000)
- Group 30—Wire Harness—Standard (Z910A, Z920A, Z925A, Z930A, Z950A) (SN 020001- )
- Group 40—Wire Harness—EFI Only (Z925A) (SN 020001- )
- Group 50—Wire Harness—Convenience Package (Z930A, Z950A, Z960A, Z970A)

## Section 40—Power Train Repair

- Group 10—Component Location
- Group 20—Repair

## Section 50—Attachments Repair

- Group 10—Component Location
- Group 20—Repair
- Group 30—Repair (Optional MCS)

## Section 60—Miscellaneous Repair

- Group 10—Wheels
- Group 20—Operators Station
- Group 30—Roll Over Protective Structure (ROPS)
- Group 40—Miscellaneous

## Section 220—Engine Diagnosis, Tests, and Adjustments, Kawasaki

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis
- Group 20—Tests and Adjustments

## Section 225—Engine Diagnosis, Tests, and Adjustments, Kohler

- Group 10—Theory of Operation
- Group 15—Diagnosis
- Group 20—Tests and Adjustments

## Section 230—Electrical Diagnosis, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 15—Theory of Operation (EFI)
- Group 20—Diagnosis
- Group 25—Engine Diagnostic Test Codes (EFI)
- Group 30—Tests and Adjustments
- Group 35—Tests and Adjustments (EFI)
- Group 40—Wiring Schematics
- Group 50—Connector Information

## Section 240—Power Train Diagnosis, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnosis
- Group 30—Tests and Adjustments

## Section 250—Attachments Diagnosis, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnosis
- Group 30—Tests and Adjustments

## Section 299—Service Tools and Kits

- Group 10—Service Tools and Kits

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2021  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2012, 2014

Preview Only

## Section 10 General Information

### Contents

	Page		Page
<b>Group 05—Safety</b>			
Recognize Safety Information .....	10-05-1	Lubricant Storage .....	10-15-3
Understand Signal Words.....	10-05-1		
Follow Safety Instructions.....	10-05-1	<b>Group 20—Machine Specifications</b>	
Practice Safe Maintenance.....	10-05-2	Serial Number Locations .....	10-20-1
Use Proper Tools .....	10-05-2		
Handle Fluids Safely—Avoid			
Fires.....	10-05-3		
Drain Gasoline When Storing			
Machine .....	10-05-3		
Prevent Acid Burns.....	10-05-4		
Prevent Battery Explosions .....	10-05-4		
Handling Batteries Safely .....	10-05-5		
Prepare for Emergencies.....	10-05-5		
Park Machine Safely.....	10-05-6		
Support Machine Properly .....	10-05-6		
Wear Protective Clothing.....	10-05-6		
Work in Clean Area .....	10-05-7		
Service Machines Safely .....	10-05-7		
Work In Ventilated Area.....	10-05-7		
Illuminate Work Area Safely .....	10-05-8		
Replace Safety Signs .....	10-05-8		
Use Proper Lifting Equipment.....	10-05-8		
Service Tires Safely.....	10-05-9		
Decommissioning — Proper			
Recycling and Disposal of Fluids			
and Components .....	10-05-10		
Protect Against High Pressure			
Spray .....	10-05-10		
Live With Safety.....	10-05-11		
<b>Group 10—General Specifications</b>			
Service Recommendations for			
O-Ring Boss Fittings.....	10-10-1		
Service Recommendations For			
Flat Face O-Ring Seal Fittings .....	10-10-2		
Metric Cap Screw Torque			
Values—Grade 7 .....	10-10-3		
Metric Bolt and Screw Torque			
Values.....	10-10-4		
Unified Inch Bolt and Screw Torque			
Values.....	10-10-5		
<b>Group 15—Fuel and Lubricant</b>			
Gasoline Engine Oil.....	10-15-1		
Oil Filters .....	10-15-1		
Gasoline Fuel for 4-Cycle			
Engines.....	10-15-1		
Transmission and Hydraulic Oil.....	10-15-2		
Multipurpose Extreme Pressure			
(EP) Grease.....	10-15-2		
Mixing of Lubricants.....	10-15-3		
Alternative and Synthetic			
Lubricants.....	10-15-3		