

GreenStar™ 3 2630 Display Technical Manual

TECHNICAL MANUAL

2630 Display Technical Solutions

TM112219 10SEP19 (ENGLISH)

Preview Only

John Deere Ag Management Solutions
PRINTED IN U.S.A.



Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 210—General Information

- Group 05A—Safety
- Group 05B—General References
- Group 05C—References for Technical Information
- Group 20—Theory of Operation
- Group 100A—Factory Support Information
- Group 200A—Maintenance and Repair

Section 211—Diagnostic Trouble Codes

- Group VTI—Virtual Terminal Implement Diagnostic Trouble Codes (VTi)

Section 212—Observable Symptom and System Diagnostics

- Group 45A—Electronic Control Units - GS3 2630
- Group 45B—Electronic Control Units - AutoTrac™
- Group 45C—Electronic Control Units - Remote Display Access
- Group 45D—Electronic Control Units - Section Control

Section 240—Electrical

- Group 05—General Information
- Group 50—Diagnostic Tests and Adjustments

Section 245—Electronic Control Units

- Group 05—General Information
- Group 10A—Operational and Preliminary Checks
- Group 10B—Interactive Tests and Calibrations
- Group 10C—Programming Electronic Control Units
- Group 30—Schematic
- Group 50—Diagnostic Tests and Adjustments
- Group VTI—Virtual Terminal Implement Software Addresses

Section 249—Electrical Component Information

- Group 05—General Information
- Group 40W—Wiring Harnesses
- Group 40X—Interconnects and Ground Points
- Group 40Z—Connector Repair Procedures

Section 260—Steering

- Group 10—Operational and Preliminary Checks
- Group 50—Diagnostic Tests and Adjustments

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2011 - 2018

Preview Only

Section 210 General Information

Contents

Page	Page
Group 05A—Safety	Group 200A—Maintenance and Repair
Recognize Safety Information 210-05A-1	Display Screen Cleaning
Understand Signal Words.....210-05A-1	Procedure 210-200A-1
Follow Safety Instructions.....210-05A-1	Speaker Removal Procedures.....210-200A-1
Practice Safe Maintenance.....210-05A-2	Speaker Replacement
Use Steps and Handholds	Procedures 210-200A-2
Correctly 210-05A-2	
Handle Electronic Components	
and Brackets Safely.....210-05A-3	
Operate Guidance Systems	
Safely.....210-05A-3	
Use Seat Belt Properly 210-05A-4	
Read Operator's Manuals for	
ISOBUS Controllers.....210-05A-4	
Avoid Backover Accidents 210-05A-4	
Group 05B—General References	
Information Available in Sections,	
Groups and Subgroups 210-05B-1	
Group 05C—References for Technical Information	
Front of Display 210-05C-1	
Back of Display 210-05C-1	
Capturing Screenshots 210-05C-2	
Screen Layout 210-05C-3	
Technician Mode Procedure 210-05C-4	
Component Identification Label 210-05C-5	
Location of Label on 2630 Display..... 210-05C-5	
Group 20—Theory of Operation	
Display Theory of Operation..... 210-20-1	
Section Control Theory of	
Operation..... 210-20-2	
Remote Display Theory of	
Operation..... 210-20-11	
CAN bus Theory of Operation 210-20-12	
ISOBUS Virtual Terminal and	
Virtual Implement Theory of	
Operation..... 210-20-19	
Task Controller Theory of	
Operation..... 210-20-21	
Implement Detection Theory of	
Operation..... 210-20-23	
Auxiliary Controller Theory of	
Operation..... 210-20-24	
Documentation Theory of	
Operation..... 210-20-26	
Field Locator Theory of Operation..... 210-20-33	
Video Triggers Theory of	
Operation..... 210-20-34	
Group 100A—Factory Support Information	
Well Prepared DTAC Case.....210-100A-1	