

**D100, D105, D110, D120,
D125, D130, D140, D150,
D155, D160, and D170
Lawn Tractors**



JOHN DEERE

TECHNICAL MANUAL

**D100, D105, D110, D120,
D125, D130, D140, D150, D155,
D160, and D170 Lawn Tractors**


TM113219 15JUN23 (ENGLISH)

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-20SEP22-1/1

Preview Only

Contents

Section 10—General Information

- Group 05—Safety
- Group 20—General Specifications
- Group 15—Fuel and Lubricants
- Group 25—Machine Specifications

Section 20—Single Cylinder Engine Repair

- Group 10—Single Cylinder Engine Repair

Section 25—V-Twin Engine Repair

- Group 10—V-Twin Engine Repair

Section 30—Electrical Repair

- Group 10—Component Location
- Group 20—Wiring Harnesses (Model Year -2011)
- Group 25—Wiring Harnesses (Model Year 2012)
- Group 27—Wiring Harnesses (Model Year 2013-)
- Group 30—Common Wiring Harnesses (All Model Years)

Section 40—Gear Power Train Repair

- Group 05—Component Location
- Group 10—Gear Power Train Repair

Section 42—Continuously Variable Transmission (CVT) Repair, D105

- Group 10—CVT Repair

Section 45—Hydrostatic Power Train Repair

- Group 05—Component Location
- Group 10—Hydrostatic Power Train Repair

Section 50—Steering and Brake Repair

- Group 10—Steering Repair
- Group 20—Brake Repair

Section 60—Attachments Repair

- Group 10—Component Location
- Group 15—Attachments Repair

Section 70—Miscellaneous Repair

- Group 10—Miscellaneous Repair

Section 220—Single Cylinder Engine Operation, Tests, and Adjustments

- Group 10—Diagnostics
- Group 20—Tests and Adjustments

Section 225—V-Twin Engine Operation, Tests, and Adjustments

- Group 10—Diagnostics
- Group 20—Tests and Adjustments

Section 230—Electrical Operation, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnostics
- Group 30—Tests and Adjustments
- Group 40—Schematics (Model Year -2011)
- Group 45—Schematics (Model Year 2012-)
- Group 50—Connector Information

Section 240—Gear Power Train Operation, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnostics
- Group 30—Tests and Adjustments

Section 242—Continuously Variable Transmission (CVT) Operation, D105

- Group 10—Component Location
- Group 20—Theory of Operation
- Group 30—Diagnostics

Section 245—Hydrostatic Power Train Operation, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnostics
- Group 30—Tests and Adjustments

Section 250—Steering and Brake Operation, Tests, and Adjustments

- Group 10—Steering Component Location
- Group 20—Steering Tests and Adjustments
- Group 30—Brake Component Location
- Group 40—Brake Tests and Adjustments

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2023
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2012, 2013, 2014, 2015, 2016, 2017, 2019, 2020

**Section 260—Attachments Operation, Tests,
and Adjustments**

Group 10—Diagnostics

Group 20—Tests and Adjustments

Section 299—Service Tools and Kits

Group 10—Service Tools

Preview Only

Section 10 General Information

Contents

	Page		Page
Group 05—Safety			
Recognize Safety Information	10-05-1	Carburetor Cleaning	10-15-4
Understand Signal Words.....	10-05-1	Carburetor Cleaning Methods	10-15-5
Follow Safety Instructions.....	10-05-1		
Practice Safe Maintenance.....	10-05-2	Group 25—Machine Specifications	
Use Proper Tools	10-05-2	Machine Specifications.....	10-25-1
Handle Fluids Safely—Avoid		Product Identification Number	
Fires.....	10-05-3	Location	10-25-3
Drain Gasoline When Storing			
Machine	10-05-3		
Prevent Acid Burns.....	10-05-4		
Prevent Battery Explosions	10-05-4		
Handling Batteries Safely	10-05-5		
Prepare for Emergencies.....	10-05-5		
Park Machine Safely.....	10-05-6		
Support Machine Properly	10-05-6		
Wear Protective Clothing.....	10-05-6		
Work in Clean Area	10-05-7		
Service Machines Safely	10-05-7		
Work In Ventilated Area.....	10-05-7		
Illuminate Work Area Safely	10-05-8		
Replace Safety Signs	10-05-8		
Use Proper Lifting Equipment.....	10-05-8		
Service Tires Safely.....	10-05-9		
Decommissioning — Proper			
Recycling and Disposal of Fluids			
and Components	10-05-10		
Protect Against High Pressure			
Spray	10-05-10		
Live With Safety.....	10-05-11		
 Group 20—General Specifications			
Service Recommendations for			
O-Ring Boss Fittings.....	10-20-1		
Service Recommendations For			
Flat Face O-Ring Seal Fittings	10-20-2		
Metric Cap Screw Torque			
Values—Grade 7	10-20-3		
Metric Bolt and Screw Torque			
Values.....	10-20-4		
Unified Inch Bolt and Screw Torque			
Values.....	10-20-5		
 Group 15—Fuel and Lubricants			
Engine Oil	10-15-1		
Oil Filters	10-15-1		
Gasoline Fuel for 4-Cycle			
Engines.....	10-15-1		
Transmission and Hydraulic Oil.....	10-15-2		
Grease.....	10-15-2		
Mixing of Lubricants.....	10-15-2		
Alternative and Synthetic			
Lubricants	10-15-3		
Lubricant Storage	10-15-3		