

# **3025E, 3032E, 3036E, and 3038E Compact Utility Tractors Diagnostic and Repair Manual**

## **TECHNICAL MANUAL**

**3025E PIN (G\_XXXXXX—), 3032E,  
3036E, and 3038E PIN (E\_XXXXXX—)  
Compact Utility Tractor, Diagnostic  
and Repair Manual**

**TM127919 24AUG21 (ENGLISH)**

For complete service information also see:

3TNV86, 4TNV86, 3TNV88, and 4TNV88 Diesel Engines (Final Tier 4 Stage IV Platform) .....	CTM120419
3TNV88F Eco-Gov Diesel Engines (Final Tier 4 Platform).....	CTM144419

**John Deere Augusta Works**  
PRINTED IN U.S.A.

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the

beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-13MAY13-1/1

Preview Only

# Contents

## Section 10—General Information

- Group 05A—Safety
- Group 05B—General References
- Group 05C—Technical Specific References
- Group 05D—Fuel and Lubricants
- Group 05E—Serial Number Locations

## Section 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

## Section 30—Fuel, Air Intake, and Exhaust Repair

- Group 05—Fuel
- Group 10—Air Intake
- Group 15—Exhaust

## Section 40—Electrical Repair

- Group 05—Electrical Connector Repair
- Group 10—Battery, Starter, and Alternator
- Group 15—Electrical System Components

## Section 50—Drive Systems and Transmission Repair

- Group 05—Power Train
- Group 10—Mechanical Front Wheel Drive
- Group 15—Differential
- Group 20—PTO

## Section 60—Steering Repair

- Group 05—Steering

## Section 61—Brake Repair

- Group 05—Brake

## Section 70—Hydraulics Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Selective Control Valve
- Group 20—Hydraulic Lines

## Section 80—Miscellaneous Repair

- Group 05—Hood and Side Panels
- Group 10—Fenders
- Group 15—Wheels

## Section 90—Cab/Open Operator's Station Repair

- Group 05—Seat and Support
- Group 10—Control Console
- Group 15—Roll-Gard
- Group 25—Open Operator Station Components

## Section 211—Diagnostic Trouble Codes

- Group 05—General References
- Group ICC—Instrument Cluster Control (ICC) Diagnostic Trouble Codes
- Group ECU—Engine Control Unit (ECU) Diagnostic Trouble Codes

## Section 212—Observable Symptoms and System Diagnostics

- Group 05—General References
- Group 20—Engine System Diagnostics
- Group 30—Fuel, Air Intake, Exhaust, and Cooling System Diagnostics
- Group 40—Electrical System Diagnostics
- Group 45—Electronic Control Unit System Diagnostics
- Group 50—Drive Systems and Transmission System Diagnostics
- Group 60—Steering System Diagnostics
- Group 61—Brakes System Diagnostics
- Group 70—Hydraulic System Diagnostics

## Section 220—Engine Operation, Test, and Adjustments

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments

## Section 230—Fuel, Air Intake, Exhaust, and Cooling Operation, Test, and Adjustments

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2021  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2013, 2014, 2016, 2017, 2019, 2020

## **Section 240A—Electrical General and Theory of Operation**

- Group 05—General References
- Group 20—Electrical Theory of Operation

## **Section 240B—Electrical Schematics**

- Group 05—General References
- Group 30AA—Key Switch, Starter and Alternator—with ECU (SE1A)
- Group 30AB—Key Switch, Starter and Alternator—without ECU (SE1B)
- Group 30BA—Instrument Cluster Control—with ECU (SE2A)
- Group 30BB—Instrument Cluster Control—without ECU (SE2B)
- Group 30CA—Engine Control Unit (ECU)—3032E, 3038E (SE3A)
- Group 30CB—Engine Control Unit (ECU)—3025E (SE3B)
- Group 30DA—Lights and Turn Signals—with ECU (SE4A)
- Group 30DB—Lights and Turn Signals—with ECU (SE4B)
- Group 30EA—Cruise Control (SE5)
- Group 30GA—Third EH SCV (SE7)

## **Section 240C—Electrical Components and Connectors**

- Group 05—General References
- Group 40A—Electrical Assemblies, Modules, and Control Units
- Group 40B—Sensors
- Group 40D—Memory and Binary Devices
- Group 40E—Lights
- Group 40F—Fuses
- Group 40G—Charging
- Group 40H—Monitoring-Warning Devices
- Group 40K—Relays
- Group 40M—Motors
- Group 40S—Switches
- Group 40W—Harnesses
- Group 40X—Interconnects
- Group 40Y—Solenoids and Electrically Actuated Mechanical Devices
- Group 40Z—Ground Points

## **Section 240D—Electrical Tests and Adjustments**

- Group 05—General References
- Group 50—Tests and Adjustments

## **Section 245—Electronic Control Units**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Test and Adjustments
- Group ICC—Instrument Cluster Control (ICC)
- Group ECU—Engine Control Unit (ECU)

## **Section 250—Drive System and Transmission Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

## **Section 260—Steering Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

## **Section 261—Brakes Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

## **Section 270—Hydraulics Operation, Test, and Adjustments**

- Group 05A—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

## **Section 299—Service Tools**

- Group 05A—General References
- Group 05C—Dealer Fabricated and Service Tools

## Section 10 General Information

### Contents

Page	Page
<b>Group 05A—Safety</b>	
Recognize Safety Information .....	10-05A-1
Understand Signal Words .....	10-05A-1
Follow Safety Instructions .....	10-05A-1
Prepare for Emergencies .....	10-05A-2
Wear Protective Clothing .....	10-05A-2
Protect Against Noise .....	10-05A-2
Handle Fuel Safely—Avoid Fires .....	10-05A-3
Handle Starting Fluid Safely .....	10-05A-3
Fire Prevention .....	10-05A-3
In Case of Fire .....	10-05A-4
Keep ROPS Installed Properly .....	10-05A-4
Use Foldable ROPS and Seat Belt Properly .....	10-05A-5
Stay Clear of Rotating Drivelines .....	10-05A-6
Use Steps and Handholds Correctly .....	10-05A-6
Read Operator's Manuals for ISOBUS Controllers .....	10-05A-7
Use Seat Belt Properly .....	10-05A-7
Operating the Tractor Safely .....	10-05A-8
Avoid Backover Accidents .....	10-05A-9
Limited Use in Forestry Operation .....	10-05A-9
Operating the Loader Tractor Safely .....	10-05A-9
Keep Riders Off Machine .....	10-05A-10
Instructional Seat .....	10-05A-10
Use Safety Lights and Devices .....	10-05A-10
Use a Safety Chain .....	10-05A-11
Transport Towed Equipment at Safe Speeds .....	10-05A-11
Towing Trailers/Implements Safely .....	10-05A-12
Use Caution on Slopes, Uneven Terrain, and Rough Ground .....	10-05A-12
Freeing a Mired Machine .....	10-05A-13
Avoid Contact with Agricultural Chemicals .....	10-05A-13
Handle Agricultural Chemicals Safely .....	10-05A-14
Handling Batteries Safely .....	10-05A-15
Avoid Heating Near Pressurized Fluid Lines .....	10-05A-15
Remove Paint Before Welding or Heating .....	10-05A-16
Handle Electronic Components and Brackets Safely .....	10-05A-16
Practice Safe Maintenance .....	10-05A-17
Avoid Hot Exhaust .....	10-05A-17
Clean Exhaust Filter Safely .....	10-05A-18
Work In Ventilated Area .....	10-05A-19
Support Machine Properly .....	10-05A-19
Prevent Machine Runaway .....	10-05A-19
Park Machine Safely .....	10-05A-20
Transport Tractor Safely .....	10-05A-20
Service Cooling System Safely .....	10-05A-20
Service Accumulator Systems Safely .....	10-05A-21
Service Tires Safely .....	10-05A-21
Service Front-Wheel Drive Tractor Safely .....	10-05A-21
Tightening Wheel Retaining Bolts/Nuts .....	10-05A-22
Avoid High-Pressure Fluids .....	10-05A-22
Do Not Open High-Pressure Fuel System .....	10-05A-22
Store Attachments Safely .....	10-05A-23
Decommissioning — Proper Recycling and Disposal of Fluids and Components .....	10-05A-23
<b>Group 05B—General References</b>	
Deliver Safely .....	10-05B-1
Information Available in Sections, Groups and Subgroups .....	10-05B-2
Glossary of Terms .....	10-05B-3
Trademarks .....	10-05B-5
<b>Group 05C—Technical Specific References</b>	
Metric Bolt and Screw Torque Values .....	10-05C-1
Unified Inch Bolt and Screw Torque Values .....	10-05C-2
Metric Cap Screw Torque Values—Grade 7 .....	10-05C-3
Gasket Sealant Application .....	10-05C-3
Service Recommendations For Flat Face O-Ring Seal Fittings .....	10-05C-4
Service Recommendations for O-Ring Boss Fittings .....	10-05C-5
<b>Group 05D—Fuel and Lubricants</b>	
Diesel Fuel .....	10-05D-1
Handling and Storing Diesel Fuel .....	10-05D-2
Diesel Engine Oil .....	10-05D-2
Diesel Engine Break-In Oil .....	10-05D-3
Alternative and Synthetic Lubricants .....	10-05D-3
Lubricant Storage .....	10-05D-3
Mixing of Lubricants .....	10-05D-4
Multipurpose Extreme Pressure (EP) Grease .....	10-05D-4
Transmission and Hydraulic Oil .....	10-05D-5

Continued on next page