

630FD, 635FD, 640FD, and 645FD Flex Draper Platforms Repair



REPAIR TECHNICAL MANUAL
630FD, 635FD, 640FD and 645FD
Draper Platforms Repair
TM136119 21JUL17 (ENGLISH)

Preview Only

John Deere Harvester Works
PRINTED IN U.S.A.




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 10—General

- Group 05—Safety
- Group 10—Specifications
- Group 15—Lubrication

Section 20—Cutterbar

- Group 05—Platform Cutterbar

Section 30—Feed Drum, Reel And Top Auger

- Group 05—Feed Drum Repair
- Group 10—Reel Repair
- Group 15—Top Auger Repair

Section 40—Electrical

- Group 05—Components
- Group 10—Harness and Connector Repair

Section 50—Drives

- Group 05—Gear Cases
- Group 10—Drivelines
- Group 15—Knife Drive

Section 60—Draper Belt

- Group 05—Draper Belt Assembly

Section 70—Hydraulics

- Group 05—Cylinders
- Group 10—Motors and Pump
- Group 15—Valves
- Group 20—Accumulator

Section 80—Frame

- Group 05—Frame Components

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2017
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2015, 2016

Preview Only

Section 10 General

Contents

	Page		Page
Group 05—Safety		Group 15—Lubrication	
Recognize Safety Information	10-05-1	Draper Gear Cases	10-15-1
Understand Signal Words.....	10-05-1	Grease.....	10-15-1
Avoid High-Pressure Fluids.....	10-05-1		
Service Accumulator Systems			
Safely.....	10-05-2		
Park Machine Safely.....	10-05-2		
Follow Safety Instructions.....	10-05-2		
Prepare for Emergencies.....	10-05-3		
Wear Protective Clothing.....	10-05-3		
Use Proper Tools	10-05-3		
Use Safety Lights and Devices.....	10-05-4		
Use Proper Lifting Equipment.....	10-05-4		
Avoid Contact With Moving Parts	10-05-4		
Avoid Contact With Cutterbar	10-05-5		
Service Machines Safely	10-05-5		
Replace Safety Signs	10-05-5		
Avoid Heating Near Pressurized			
Fluid Lines	10-05-6		
Protect Against Noise	10-05-6		
Practice Safe Maintenance.....	10-05-7		
Avoid Harmful Asbestos Dust.....	10-05-7		
Work In Ventilated Area.....	10-05-8		
Illuminate Work Area Safely	10-05-8		
Service Tires Safely.....	10-05-9		
Support Machine Properly	10-05-9		
Work in Clean Area	10-05-10		
Remove Paint Before Welding or			
Heating	10-05-10		
Decommissioning — Proper			
Recycling and Disposal of Fluids			
and Components	10-05-11		
Live With Safety.....	10-05-11		
Group 10—Specifications			
Hydraulic Specifications	10-10-1		
Overall Dimensions	10-10-1		
Component Specifications.....	10-10-2		
Platform Weights	10-10-2		
Metric Bolt and Screw Torque			
Values.....	10-10-3		
Unified Inch Bolt and Screw Torque			
Values.....	10-10-4		
Face Seal Fittings Assembly			
and Installation—All Pressure			
Applications	10-10-5		
Metric Face Seal and O-Ring			
Stud End Fitting Torque			
Chart—Standard Pressures	10-10-6		
SAE Face Seal and O-Ring			
Stud End Fitting Torque			
Chart—Standard Pressures	10-10-7		
External Hexagon Port Plug Torque			
Chart.....	10-10-8		