

**XUV825E, XUV825M,
XUV825M S4 Gator™
Utility Vehicles (Serial No.
010001-040000)**



TECHNICAL MANUAL

**XUV825E, XUV825M, XUV825M S4
Gator™ Utility Vehicles (Serial No.
010001-040000)**

TM150019 06JUL22 (ENGLISH)

Preview Only

John Deere Horicon Works
PRINTED IN U.S.A.




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuel and Lubricants
- Group 20—Machine Specifications

Section 20—Engine Repair

- Group 10—Repair

Section 30—Electrical Repair

- Group 10—Wiring Harnesses
- Group 20—Wiring Harnesses, Kits

Section 40—Power Train Repair

- Group 10—Transmission
- Group 15—Axles and Drive Shaft
- Group 20—Mechanical Four Wheel Drive

Section 50—Steering and Brake Repair

- Group 10—Steering
- Group 20—Brakes

Section 60—Miscellaneous Repair

- Group 10—Wheels
- Group 15—Hood, Cargo Box, and Bumper
- Group 20—Miscellaneous

Section 70—Operator's Station Repair

- Group 10—Operator's Station and Seat
- Group 20—Occupant Protective Structure (OPS)

Section 220—Engine Operation, Tests, and Adjustments

- Group 10—Component Location
- Group 20—Diagnosis
- Group 25—Tests and Adjustments

Section 230—Electrical Operation, Tests, and Adjustments

- Group 05—General Information
- Group 10—Component Location
- Group 15—Theory of Operation
- Group 30—Wiring Schematics
- Group 50—Tests and Adjustments
- Group 55—Connector Information
- Group 60—Diagnostics

Section 240—Control Unit Operation, Tests, and Adjustments

- Group 10—Theory of Operation
- Group 20—Diagnostic Trouble Codes, ICC
- Group 30—Diagnostic Trouble Codes, ECU
- Group 40—Diagnostic Trouble Codes, SCU
- Group 50—Tests and Adjustments

Section 250—Power Train Operation, Tests, and Adjustments

- Group 10—Component Location
- Group 15—Theory of Operation
- Group 20—Diagnosis
- Group 25—Tests and Adjustments

Section 260—Steering and Brake Operation, Tests, and Adjustments

- Group 10—Component Location
- Group 15—Theory of Operation
- Group 20—Diagnosis
- Group 25—Tests and Adjustments

Section 270—Miscellaneous Operation, Tests, and Adjustments

- Group 10—Component Location
- Group 25—Tests and Adjustments

Section 299—Service Tools

- Group 10—Service Tools and Kits

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2022
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2019, 2021

Preview Only

Section 10 General Information

Contents

	Page		Page
Group 05—Safety			
Recognize Safety Information	10-05-1	Multipurpose Extreme Pressure	
Understand Signal Words	10-05-1	(EP) Grease.....	10-15-2
Replace Safety Signs	10-05-1	Mixing of Lubricants.....	10-15-3
Handle Fluids Safely—Avoid		Alternative and Synthetic	
Fires.....	10-05-2	Lubricants	10-15-3
Prepare for Emergencies.....	10-05-2	Lubricant Storage	10-15-3
Prevent Battery Explosions	10-05-2		
Prevent Acid Burns.....	10-05-3	Group 20—Machine Specifications	
Wear Protective Clothing.....	10-05-3	Machine Specifications.....	10-20-1
Avoid High-Pressure Fluids	10-05-4	Product Identification Number	
Avoid Heating Near Pressurized		Location	10-20-2
Fluid Lines	10-05-4		
Service Machines Safely	10-05-4		
Use Proper Tools	10-05-5		
Park Machine Safely.....	10-05-5		
Support Machine Properly	10-05-5		
Use Proper Lifting Equipment.....	10-05-6		
Work in Clean Area	10-05-6		
Protect Against High Pressure			
Spray	10-05-6		
Illuminate Work Area Safely	10-05-7		
Work In Ventilated Area.....	10-05-7		
Remove Paint Before Welding or			
Heating	10-05-7		
Avoid Harmful Asbestos Dust.....	10-05-8		
Service Tires Safely.....	10-05-8		
Stay Clear of Rotating Drivelines.....	10-05-9		
Service Cooling System Safely	10-05-10		
Decommissioning — Proper			
Recycling and Disposal of Fluids			
and Components	10-05-10		
Handle Chemical Products Safely.....	10-05-11		
Live With Safety.....	10-05-11		
Group 10—General Specifications			
Service Recommendations for			
O-Ring Boss Fittings.....	10-10-1		
Service Recommendations For			
Flat Face O-Ring Seal Fittings	10-10-2		
Metric Cap Screw Torque			
Values—Grade 7	10-10-2		
Metric Bolt and Screw Torque			
Values	10-10-3		
Unified Inch Bolt and Screw Torque			
Values	10-10-4		
Group 15—Fuel and Lubricants			
Gasoline Engine Oil.....	10-15-1		
Oil Filters	10-15-1		
Gasoline Fuel for 4-Cycle			
Engines.....	10-15-1		
Transmission and Hydraulic Oil.....	10-15-2		