

**Select Series Tractors
X330, X350, X354, X370,
X380, X384, X390, X394
Serial Number 110001-**

TECHNICAL MANUAL

**Select Series™ Tractors
X330, X350, X354, X370, X380,
X384, X390, X394**


TM158319 14OCT21 (ENGLISH)

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 10—General Information

- Group 10—Safety
- Group 20—General Specifications
- Group 30—O-Ring Seal Service Recommendations
- Group 40—Fuels and Lubricants
- Group 50—Machine Specifications

Section 20—Engine Repair — Common

- Group 05—General Information

Section 20A—Engine Repair - X330

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 20B—Engine Repair - X350, X354, X370

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 20C—Engine Repair - X380, X384, X390, and X394

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 30—Electrical Repair

- Group 05—General Repair
- Group 10—Engine Electrical - Remove and Install
- Group 25—Engine Electrical - Disassemble and Assemble
- Group 30—Engine Electrical - Inspect

Section 40—Power Train Repair

- Group 10—Power Train

Section 50—Steering and Brake Repair

- Group 10—Steering
- Group 20—Brakes

Section 60—Hydraulic Repair

- Group 10—Hydraulics

Section 70—Attachment Repair

- Group 10—Attachments

Section 80—Operator's Station Repair

- Group 10—Operator's Station

Section 90—Miscellaneous Repair

- Group 10—Miscellaneous

Section 220A—Engine Diagnostics, Tests, and Adjustments - X330

- Group 05—General Information
- Group 10—Operational and Preliminary Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 220B—Engine Diagnostics, Tests, and Adjustments - X350, X354, X370

- Group 05—General Information
- Group 10—Operational and Preliminary Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 220C—Engine Diagnostics, Tests, and Adjustments - X380, X384, X390, X394

- Group 05—General Information
- Group 10—Operational and Preliminary Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 230—Electrical Operation, Tests, and Adjustments

- Group 05—General Information
- Group 25—Theory of Operation
- Group 30—Schematics
- Group 40—Diagnosis
- Group 50—Tests and Adjustments
- Group 60—Connectors
- Group 70—DTCs, ICC
- Group 80—Electronic Control Units

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2021
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2018, 2017, 2016, 2019, 2020

**Section 240—Power Train Operation, Tests,
and Adjustments**

- Group 10—Component Location
- Group 20—Theory of Operation
- Group 30—Diagnosis
- Group 40—Tests and Adjustments

**Section 250—Steering and Brake Operation,
Tests, and Adjustments**

- Group 10—Component Location
- Group 20—Theory of Operation
- Group 30—Diagnosis
- Group 40—Tests and Adjustments

**Section 260—Hydraulic System Operation,
Tests, and Adjustments**

- Group 10—Component Location
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Diagnosis
- Group 50—Tests and Adjustments

**Section 270—Attachment Operation, Tests,
and Adjustments**

- Group 10—Component Location
- Group 20—Diagnosis
- Group 30—Tests and Adjustments

**Section 280—Miscellaneous Operation,
Tests, and Adjustments**

- Group 10—Tests and Adjustments

Section 299—Service Tools and Kits

- Group 10—Service Tools

Preview Only

Section 10 General Information

Contents

	Page		Page
Group 10—Safety			
Live With Safety.....	10-10-1	Work in Clean Area	10-10-16
Follow Safety Instructions.....	10-10-1	Work In Ventilated Area.....	10-10-16
Avoid Harmful Asbestos Dust.....	10-10-1	Group 20—General Specifications	
Avoid Heating Near Pressurized		Metric Bolt and Screw Torque	
Fluid Lines	10-10-2	Values.....	10-20-1
Avoid High-Pressure Fluids	10-10-2	Metric Cap Screw Torque	
Avoid Hot Exhaust.....	10-10-2	Values—Grade 7	10-20-1
Avoid Static Electricity Risk When		Unified Inch Bolt and Screw Torque	
Refueling	10-10-3	Values.....	10-20-2
Construct Dealer-Made Tools		Gasket Sealant Application	10-20-3
Safety.....	10-10-3	Group 30—O-Ring Seal Service Recommendations	
Decommissioning — Proper		Face Seal Fittings With Inch Stud	
Recycling and Disposal of Fluids		Ends Torque	10-30-1
and Components	10-10-4	Face Seal Fittings With Metric Stud	
Drain Gasoline When Storing		Ends Torque	10-30-2
Machine	10-10-4	Service Recommendations for Fittings	
Follow Tire Recommendations	10-10-5	Flat Face O-Ring Seal.....	10-30-3
Handle Agricultural Chemicals		Service Recommendations for	
Safety.....	10-10-5	O-Ring Boss Fittings.....	10-30-3
Handle Fluids Safely—Avoid		Group 40—Fuels and Lubricants	
Fires.....	10-10-6	Gasoline Fuel for 4-Cycle	
Illuminate Work Area Safely	10-10-6	Engines.....	10-40-1
Keep Electronic Control Unit		Gasoline Storage.....	10-40-1
Connectors Clean.....	10-10-6	Gasoline Engine Oil.....	10-40-2
Keep ROPS Installed Properly	10-10-7	Engine Break-In Oil	10-40-3
Park Machine Safely.....	10-10-7	Alternative Lubricants.....	10-40-3
Practice Safe Maintenance.....	10-10-8	Synthetic Lubricants	10-40-3
Prepare for Emergencies.....	10-10-8	Lubricant Storage	10-40-4
Prevent Acid Burns.....	10-10-9	Mixing of Lubricants.....	10-40-4
Prevent Battery Explosions	10-10-9	Grease.....	10-40-4
Prevent Machine Runaway.....	10-10-10	Mower Spindle Grease	10-40-4
Protect Against High Pressure		Transaxle Oil	10-40-5
Spray	10-10-10	Group 50—Machine Specifications	
Recognize Safety Information	10-10-10	Record Identification Numbers	10-50-1
Remove Paint Before Welding or		Machine Specifications.....	10-50-2
Heating	10-10-11		
Service Accumulator Systems			
Safely.....	10-10-11		
Service and Operate Chemical			
Sprayers Safely	10-10-12		
Service Cooling System Safely	10-10-12		
Service Machines Safely	10-10-13		
Service Tires Safely.....	10-10-13		
Servicing Electronic Control Units.....	10-10-13		
Support Machine Properly	10-10-14		
Understand Signal Words.....	10-10-14		
Use Proper Lifting Equipment.....	10-10-14		
Use Proper Tools.....	10-10-15		
Wait Before Opening			
High-Pressure Fuel System.....	10-10-15		
Wear Protective Clothing.....	10-10-15		
Welding Near Electronic Control			
Units	10-10-16		