



42 Bale Ejector



JOHN DEERE

TECHNICAL MANUAL

 
42 Bale Ejector

TM1584 (25MAR96) English

Preview Only


John Deere Ottumwa Works
TM1584 (25MAR96)

LITHO IN U.S.A.
ENGLISH



Introduction

FOREWORD

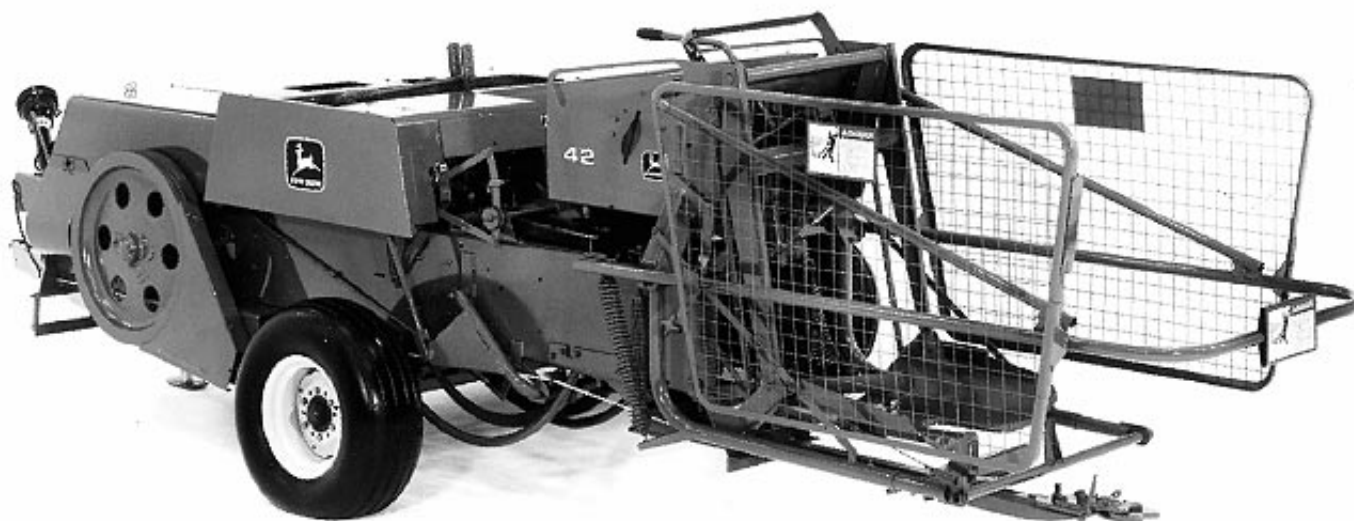

42 Bale Ejector on a 338 Baler

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05—Safety
- Group 10—Machine Description
- Group 15—Specifications and Torques
- Group 20—Lubrication

SECTION 20—ELECTRICAL SYSTEM

- Group 05—Diagnosing Malfunctions
- Group 10—General Information and Wiring
Diagrams
- Group 15—Console Control

SECTION 30—HYDRAULIC SYSTEM

- Group 05—General Information
- Group 10—Diagnosing Malfunctions
- Group 15—Hydraulic System Tests
- Group 20—Hydraulic Pump
- Group 25—Control Valve
- Group 30—Throwing Cylinder
- Group 35—Tilt Cylinder
- Group 40—Latch Cylinder

SECTION 40—EJECTOR

- Group 05—General Information

Index

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1584-19-25MAR96

COPYRIGHT© 1996
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1995 Deere & Company

10

20

30

40

INDEX

Preview Only

Contents

Page

Group 05—Safety

Group 10—Machine Description

General Description 10-10-1

Group 15—Specifications and Torques

Specifications 10-15-1

Group 20—Lubrication

Lubricate Bale Ejector Properly 10-20-1

Grease 10-20-2

Hydraulic Oil 10-20-2

Intervals 10-20-3

Control Valve 10-20-3

Preview Only