

**XUV 835E, XUV 835M,
and XUV 835R
Gator™ Utility Vehicles
(Serial No. 040001-)**



JOHN DEERE

TECHNICAL MANUAL

**XUV 835E, XUV 835M, and XUV 835R
Gator™ Utility Vehicles
(Serial No. 040001-)**

TM160519 03DEC24 (ENGLISH)


John Deere Horicon Works
PRINTED IN U.S.A.

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-20SEP22-1/1

Preview Only

Contents

Section 10—General Information

- Group 10—Safety
- Group 20—General Specifications
- Group 30—Fuel and Lubricants
- Group 40—Machine Specifications

Section 20—Engine Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 30—Fuel, Air Intake, and Cooling System Repair

- Group 05—General Information
- Group 10—Remove and Install

Section 40—Electrical Repair

- Group 05—General Information
- Group 10—Remove and Install

Section 50—Drivetrain Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 60—Steering and Brake Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble

Section 80—Attachments and Machine—Specific Repair

- Group 05—General Information
- Group 10—Remove and Install

Section 90—Operator Station Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 30—Inspect

Section 210—General Information —Diagnostics

- Group 05—General Information

Section 211—Diagnostic Trouble Codes

- Group AMS—AMS AutoTrac System™ Control Units
- Group ATC—Control Unit ATC
- Group CRH—Control Unit CRH
- Group ECU—Control Unit ECU
- Group ICC—Control Unit ICC
- Group JDL—Control Unit MTG (JDL/Telematics)
- Group SCU—Control Unit SCU
- Group USC—Control Unit USC (AutoTrac)

Section 212—System Diagnostics Access

- Group 220—Engine System
- Group 230—Fuel, Air Intake, and Cooling System
- Group 240—Electrical System
- Group 245—Electrical Control Units
- Group 250—Drivetrain System
- Group 260—Steering and Brakes
- Group 280—Attachments

Section 220—Engine System Diagnostics

- Group 05—General Information
- Group 10—Operational and Preliminary Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 230—Fuel, Air Intake, and Cooling System Diagnostics

- Group 05—General Information
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 50—Test and Adjustments
- Group 50A—Diagnostics

Section 240—Electrical System Diagnostics

- Group 05—General Information
- Group 20A—Theory of Operation - Starting, Charging, and Power Distribution
- Group 20B—Theory of Operation - Steering and Brakes
- Group 20C—Theory of Operation - Operator Station
- Group 20D—Theory of Operation - CAN Bus
- Group 20E—Theory of Operation - Engine
- Group 20F—Theory of Operation - Lighting
- Group 20G—Theory of Operation - Drivetrain
- Group 20H—Theory of Operation - Fuel, Air Intake, and Cooling
- Group 30A—Schematics - Starting, Charging, and Power Distribution
- Group 30B—Schematics - Steering and Brakes

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2024
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2020, 2021, 2022

Group 30C—Schematics - Operator Station
 Group 30D—Schematics - CAN Bus
 Group 30E—Schematics - Engine
 Group 30F—Schematics - Lighting
 Group 30G—Schematics - Drivetrain
 Group 30H—Schematics - Fuel, Air Intake, and Cooling
 Group 50—Tests and Adjustments
 Group 50A—Diagnostics - Starting, Charging, and Power Distribution
 Group 50B—Diagnostics - Steering and Brakes Systems
 Group 50C—Diagnostics - Operator Station System
 Group 50D—Diagnostics - CAN Bus System
 Group 50E—Diagnostics - Engine System
 Group 50F—Diagnostics - Lighting System
 Group 50G—Diagnostics - Drivetrain System
 Group 50H—Diagnostics - Fuel, Air Intake, and Cooling

Group 50A—Diagnostics

Section 290—Operator Station Diagnostics

Group 05—General Information
 Group 10—Operational and Preliminary Checks
 Group 20A—Theory of Operation — HVAC
 Group 30A—Schematics — HVAC
 Group 40A—Component Locations — HVAC
 Group 50—Test and Adjustments
 Group 50A—Diagnostics— HVAC

Section 300—Special Tools

Group 10—Service Tools and Kits

Section 245—Electrical Control Unit Diagnostics

Group 05—General Information
 Group 20—Theory of Operation
 Group 30—Schematics
 Group 50—Tests and Adjustments
 Group 50A—Diagnostics

Section 249—Electrical Systems—Connectors

Group 05—General Information
 Group 40A—XA—Electrical Assembly Connectors
 Group 40B—XB—Sensor Connectors
 Group 40E—XE—Light Connectors
 Group 40F—XF—Fuse Connectors
 Group 40G—XG—Charging Connectors
 Group 40H—XH—Alarm Connectors
 Group 40K—XK—Relay Connectors
 Group 40L—XL—Inductor Connectors
 Group 40M—XM—Motor Connectors
 Group 40R—XR—Resistor Connectors
 Group 40S—XS—Switch Connectors
 Group 40V—XV—Diode Connectors
 Group 40W—XW—Terminals
 Group 40X—XX—Inline Connectors
 Group 40Y—XY—Solenoid Connectors

Section 250—Drivetrain System Diagnostics

Group 20—Theory of Operation
 Group 50—Test and Adjustments
 Group 50A—Diagnostics

Section 260—Steering and Brake System Diagnostics

Group 20—Theory of Operation
 Group 30—Schematics
 Group 50—Test and Adjustments
 Group 50A—Diagnostics

Section 280—Attachments and Machine—Specific System Diagnostics

Group 20—Theory of Operation

Section 10 General Information

Contents

	Page		Page
Group 10—Safety			
Live With Safety.....	10-10-1	Work in Clean Area	10-10-16
Follow Safety Instructions.....	10-10-1	Work In Ventilated Area.....	10-10-16
Avoid Harmful Asbestos Dust.....	10-10-1		
Avoid Heating Near Pressurized		Group 20—General Specifications	
Fluid Lines	10-10-2	Service Recommendations for	
Avoid High-Pressure Fluids	10-10-2	O-Ring Boss Fittings.....	10-20-1
Avoid Hot Exhaust.....	10-10-2	Service Recommendations For	
Avoid Static Electricity Risk When		Flat Face O-Ring Seal Fittings	10-20-2
Refueling	10-10-3	Metric Cap Screw Torque	
Construct Dealer-Made Tools		Values—Grade 7	10-20-3
Safety.....	10-10-3	Metric Bolt and Screw Torque	
Decommissioning — Proper		Values.....	10-20-4
Recycling and Disposal of Fluids		Unified Inch Bolt and Screw Torque	
and Components	10-10-4	Values	10-20-5
Drain Gasoline When Storing			
Machine	10-10-4	Group 30—Fuel and Lubricants	
Follow Tire Recommendations	10-10-5	Gasoline Engine Oil.....	10-30-1
Handle Agricultural Chemicals		Oil Filters	10-30-1
Safety.....	10-10-5	Gasoline Fuel for 4-Cycle	
Handle Fluids Safely—Avoid		Engines.....	10-30-1
Fires.....	10-10-6	Transmission and 4WD Front	
Illuminate Work Area Safely	10-10-6	Differential Oil	10-30-2
Keep Electronic Control Unit		Multipurpose Extreme Pressure	
Connectors Clean.....	10-10-6	(EP) Grease.....	10-30-2
Keep ROPS Installed Properly	10-10-7	Mixing of Lubricants.....	10-30-2
Park Machine Safely.....	10-10-7	Alternative and Synthetic	
Practice Safe Maintenance.....	10-10-8	Lubricants	10-30-3
Prepare for Emergencies.....	10-10-8	Lubricant Storage	10-30-3
Prevent Acid Burns.....	10-10-9		
Prevent Battery Explosions	10-10-9	Group 40—Machine Specifications	
Prevent Machine Runaway.....	10-10-10	Machine Specifications.....	10-40-1
Protect Against High Pressure		Product Identification Number	
Spray	10-10-10	Location	10-40-2
Recognize Safety Information	10-10-10		
Remove Paint Before Welding or			
Heating	10-10-11		
Service Accumulator Systems			
Safely.....	10-10-11		
Service and Operate Chemical			
Sprayers Safely	10-10-12		
Service Cooling System Safely	10-10-12		
Service Machines Safely	10-10-13		
Service Tires Safely.....	10-10-13		
Servicing Electronic Control Units.....	10-10-13		
Support Machine Properly	10-10-14		
Understand Signal Words.....	10-10-14		
Use Proper Lifting Equipment.....	10-10-14		
Use Proper Tools	10-10-15		
Wait Before Opening			
High-Pressure Fuel System.....	10-10-15		
Wear Protective Clothing.....	10-10-15		
Welding Near Electronic Control			
Units	10-10-16		