

# 3025E, 3032E, and 3038E Compact Utility Tractors Diagnostic and Repair Manual

## TECHNICAL MANUAL

### 3025E, 3032E, and 3038E Compact Utility Tractors Diagnostic and Repair Manual

TM166919 20DEC23 (ENGLISH)

For complete service information also see:

3TNV86, 4TNV86, 3TNV88, and 4TNV88 Diesel Engines (Final Tier 4 Stage IV Platform) .....	CTM120419
3TNV88F Eco-Gov Diesel Engines (Final Tier 4 Platform).....	CTM144419

**John Deere Augusta Works**  
PRINTED IN U.S.A.

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the

beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-13MAY13-1/1

Preview Only

# Contents

## Section 10—General Information

- Group 05A—Safety
- Group 05B—General References
- Group 05C—Technical Specific References
- Group 05D—Fuel and Lubricants
- Group 05E—Serial Number Locations

## Section 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

## Section 30—Fuel, Air Intake, and Exhaust Repair

- Group 05—Fuel
- Group 10—Air Intake
- Group 15—Exhaust

## Section 40—Electrical Repair

- Group 05—Electrical Connector Repair
- Group 10—Battery, Starter, and Alternator
- Group 15—Electrical System Components

## Section 50—Drive Systems and Transmission Repair

- Group 05—Power Train
- Group 10—Mechanical Front Wheel Drive
- Group 15—Differential
- Group 20—PTO

## Section 60—Steering Repair

- Group 05—Steering

## Section 61—Brake Repair

- Group 05—Brake

## Section 70—Hydraulics Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Range Control and Three Point Hitch
- Group 20—Selective Control Valve
- Group 25—Hydraulic Lines

## Section 80—Miscellaneous Repair

- Group 05—Hood and Side Panels
- Group 10—Fenders
- Group 15—Wheels

## Section 90—Cab/Open Operator's Station Repair

- Group 05—Seat and Support
- Group 10—Control Console
- Group 15—Roll-Gard
- Group 25—Open Operator Station Components

## Section 211—Diagnostic Trouble Codes

- Group 05—General References
- Group ICC—Instrument Cluster Control (ICC) Diagnostic Trouble Codes
- Group ECU—Engine Control Unit (ECU) Diagnostic Trouble Codes

## Section 212—Observable Symptoms and System Diagnostics

- Group 05—General References
- Group 20—Engine System Diagnostics
- Group 30—Fuel, Air Intake, Exhaust, and Cooling System Diagnostics
- Group 40—Electrical System Diagnostics
- Group 45—Electronic Control Unit System Diagnostics
- Group 50—Drive Systems and Transmission System Diagnostics
- Group 60—Steering System Diagnostics
- Group 61—Brakes System Diagnostics
- Group 70—Hydraulic System Diagnostics

## Section 220—Engine Operation, Test, and Adjustments

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments

## Section 230—Fuel, Air Intake, Exhaust, and Cooling Operation, Test, and Adjustments

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2023  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2020, 2021, 2022

**Section 240A—Electrical General and Theory of Operation**

- Group 05—General References
- Group 20—Electrical Theory of Operation

**Section 240B—Electrical Schematics**

- Group 05—General References
- Group 30AA—Starting and Charging—with ECU (SE1A)
- Group 30AB—Starting and Charging—without ECU (SE1B)
- Group 30BA—Lighting—without License Light (SE2A)
- Group 30BB—Lighting—with License Light (SE2B)
- Group 30BC—Brake Switch, Horn, and Rear Trailer Connector (SE2C)
- Group 30CA—Instrument Cluster Control (ICC) (SE3)
- Group 30DA—Engine Control Unit (ECU) (SE4)
- Group 30FA—Cruise Control Kit (SE6)
- Group 30GA—Third EH SCV (SE7)

**Section 240C—Electrical Components and Connectors**

- Group 05—General References
- Group 40A—Electrical Assemblies, Modules, and Control Units
- Group 40B—Sensors
- Group 40C—Resistors/Condensers/Capacitors
- Group 40E—Lights
- Group 40F—Fuses
- Group 40G—Charging
- Group 40H—Monitoring/Warning Devices
- Group 40K—Relays
- Group 40M—Motors
- Group 40S—Switches
- Group 40WA—Wiring Harnesses
- Group 40X—Interconnects
- Group 40Y—Solenoids and Electrically Actuated Mechanical Devices
- Group 40Z—Ground Points

**Section 240D—Electrical Tests and Adjustments**

- Group 05—General References
- Group 50—Tests and Adjustments

**Section 245—Electronic Control Units**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Test and Adjustments
- Group ICC—Instrument Cluster Control (ICC)
- Group ECU—Engine Control Unit (ECU)

**Section 250—Drive System and Transmission Operation, Test, and Adjustments**

- Group 05—General References

- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

**Section 260—Steering Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

**Section 261—Brakes Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

**Section 270—Hydraulics Operation, Test, and Adjustments**

- Group 05—General References
- Group 10—Calibrations, Preliminary Checks and Operational Checks
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information
- Group 50—Tests and Adjustments

**Section 290—Cab/Open Operators Station Operation, Test, and Adjustments**

- Group 05—General References
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 40—Component and Connector Information

**Section 299—Service Tools**

- Group 05A—General References
- Group 05C—Dealer Fabricated and Service Tools

# Section 10 General Information

## Contents

	Page		Page
<b>Group 05A—Safety</b>			
Recognize Safety Information .....	10-05A-1	Prevent Machine Runaway.....	10-05A-19
Understand Signal Words.....	10-05A-1	Park Machine Safely.....	10-05A-20
Follow Safety Instructions.....	10-05A-1	Transport Tractor Safely.....	10-05A-20
Prepare for Emergencies.....	10-05A-2	Service Cooling System Safely .....	10-05A-20
Wear Protective Clothing.....	10-05A-2	Service Accumulator Systems	
Protect Against Noise.....	10-05A-2	Safely.....	10-05A-21
Handle Fuel Safely—Avoid Fires.....	10-05A-3	Service Tires Safely.....	10-05A-21
Handle Starting Fluid Safely.....	10-05A-3	Service Front-Wheel Drive Tractor	
Fire Prevention .....	10-05A-3	Safely.....	10-05A-21
In Case of Fire.....	10-05A-4	Tightening Wheel Retaining	
Keep ROPS Installed Properly .....	10-05A-4	Bolts/Nuts .....	10-05A-22
Use Foldable ROPS and Seat Belt		Avoid High-Pressure Fluids .....	10-05A-22
Properly .....	10-05A-5	Do Not Open High-Pressure Fuel	
Stay Clear of Rotating Drivelines.....	10-05A-6	System.....	10-05A-22
Use Steps and Handholds		Store Attachments Safely.....	10-05A-23
Correctly .....	10-05A-6	Decommissioning — Proper	
Read Operator’s Manuals for		Recycling and Disposal of Fluids	
ISOBUS Controllers.....	10-05A-7	and Components .....	10-05A-23
Use Seat Belt Properly.....	10-05A-7	<b>Group 05B—General References</b>	
Operating the Tractor Safely .....	10-05A-8	Deliver Safely .....	10-05B-1
Avoid Backover Accidents.....	10-05A-9	Information Available in Sections,	
Limited Use in Forestry Operation.....	10-05A-9	Groups and Subgroups .....	10-05B-2
Operating the Loader Tractor		Glossary of Terms.....	10-05B-3
Safely.....	10-05A-9	Trademarks .....	10-05B-5
Keep Riders Off Machine .....	10-05A-10	<b>Group 05C—Technical Specific References</b>	
Instructional Seat.....	10-05A-10	Metric Bolt and Screw Torque	
Use Safety Lights and Devices.....	10-05A-10	Values.....	10-05C-1
Use a Safety Chain.....	10-05A-11	Unified Inch Bolt and Screw Torque	
Transport Towed Equipment at		Values.....	10-05C-2
Safe Speeds.....	10-05A-11	Metric Cap Screw Torque	
Towing Trailers/Implements		Values—Grade 7 .....	10-05C-3
Safely.....	10-05A-12	Gasket Sealant Application .....	10-05C-3
Use Caution on Slopes, Uneven		Service Recommendations For	
Terrain, and Rough Ground.....	10-05A-12	Flat Face O-Ring Seal Fittings .....	10-05C-4
Freeing a Mired Machine.....	10-05A-13	Service Recommendations for	
Avoid Contact with Agricultural		O-Ring Boss Fittings.....	10-05C-5
Chemicals.....	10-05A-13	<b>Group 05D—Fuel and Lubricants</b>	
Handle Agricultural Chemicals		Diesel Fuel.....	10-05D-1
Safely.....	10-05A-14	Handling and Storing Diesel Fuel.....	10-05D-2
Handling Batteries Safely .....	10-05A-15	Diesel Engine Oil.....	10-05D-2
Avoid Heating Near Pressurized		Diesel Engine Break-In Oil .....	10-05D-3
Fluid Lines .....	10-05A-15	Alternative and Synthetic	
Remove Paint Before Welding or		Lubricants .....	10-05D-3
Heating .....	10-05A-16	Lubricant Storage.....	10-05D-3
Handle Electronic Components		Mixing of Lubricants.....	10-05D-4
and Brackets Safely.....	10-05A-16	Multipurpose Extreme Pressure	
Practice Safe Maintenance.....	10-05A-17	(EP) Grease.....	10-05D-4
Avoid Hot Exhaust.....	10-05A-17	Transmission and Hydraulic Oil.....	10-05D-5
Clean Exhaust Filter Safely .....	10-05A-18		
Work In Ventilated Area.....	10-05A-19		
Support Machine Properly .....	10-05A-19		

Continued on next page