

# 1900 Commodity Air Cart



JOHN DEERE


## TECHNICAL MANUAL

1900 Commodity  
Air Cart

TM1711 (21MAR01) English

John Deere Seeding Group  
TM1711 (21MAR01)

LITHO IN U.S.A.  
ENGLISH

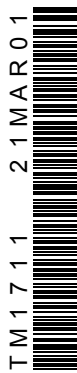


# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided into two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools,

other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

This manual is part of a total product support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Preview Only

AG,OUO1011,2768 -19-04APR00-1/1

# Contents

## SECTION 10—General Information

- Group 05—Safety
- Group 10—Lubricants
- Group 15—General Information and Specifications
- Group 20—Tractor Specifications
- Group 25—Repair Specifications
- Group 30—Service Information Bulletins

## SECTION 20—Welding

- Group 05—Repair and Welding

## SECTION 30—Air System

- Group 05—System Inspection
- Group 10—Fan Assembly
- Group 15—Air Plenum
- Group 20—Air Manifold

## SECTION 40—Electrical and Monitor Systems

- Group 05—Component Replacement—Standard System
- Group 10—Connector Repair
- Group 15—Component Replacement—Optional System (If Equipped)

## SECTION 50—Meter Drive System

- Group 05—Meter Drive Repair

## SECTION 60—Product Metering System

- Group 05—Component Repair
- Group 10—Meter Housing
- Group 15—Product Agitators
- Group 20—Half-Width Disconnect

## SECTION 70—Hydraulic System Components

- Group 05—Component Repair

## SECTION 80—Miscellaneous

- Group 05—Wheel Bearings and Hardware
- Group 10—Auger Repair
- Group 15—Tanks

## SECTION 230—Air System Operation and Diagnosis

- Group 05—Theory of Operation
- Group 10—Troubleshooting

## SECTION 240—Electrical and Monitor System Operation and Diagnosis

- Group 05—Monitor/Control—Standard System Description
- Group 10—Variable Rate Control
- Group 15—Primary Seed Counting System
- Group 20—Blockage Monitoring
- Group 25—Radar
- Group 30—Problem Diagnosis—GREENSTAR Display
- Group 35—Troubleshooting
- Group 40—System and Component Tests and Checks
- Group 45—General Information—Wiring Diagrams/Schematics
- Group 50—Wiring Diagrams—Tow-Between Cart
- Group 55—Wiring Diagrams—Tow-Behind Cart
- Group 60—Wiring Diagrams—Seed Counting System
- Group 65—Connection Diagrams—Blockage Monitor (Tow-Behind)
- Group 70—Connection Diagrams—Blockage Monitor (Tow-Between)
- Group 75—Wiring Diagrams—Blockage Monitor Systems
- Group 80—Tractor Wiring

## SECTION 250—Meter Drive System Operation and Diagnosis

- Group 05—Meter Drive System
- Group 10—Tests
- Group 15—Troubleshooting

## SECTION 260—Product Metering System Operation/Diagnosis

- Group 05—System Description
- Group 10—Checks
- Group 15—Tests
- Group 20—Troubleshooting

## SECTION 270—Hydraulic System Operation and Diagnosis

- Group 05—Theory of Operation

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2001  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright © 1999, 1998, 1997

|    |  |
|----|--|
| 10 | Group 10—Troubleshooting                 |
|    | Group 15—Hydraulic System JIC Schematics |

20

30

40

50

60

70

80

230

240

Preview Only

250

260

270

INDX

Preview Only