

**X500 Select Series™
Tractors Multi-Terrain
Serial Number 180001-**



JOHN DEERE

**TECHNICAL MANUAL
Select Series™ Tractors
X570, X580, X584 Multi-Terrain**

TM175619 11SEP24 (ENGLISH)


John Deere Horicon Works
PRINTED IN U.S.A.

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-20SEP22-1/1

Preview Only

Contents

Section 10—General Information

- Group 10—Safety
- Group 20—General Specifications
- Group 30—O-Ring Seal Service Recommendations
- Group 40—Fuels and Lubricants
- Group 50—Machine Specifications

Section 20—Engine Repair - Common

- Group 05—General Information

Section 20A—Engine Repair - X570, X580, and X584

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 40—Electrical Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble
- Group 30—Inspect

Section 50—Drivetrain Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble

Section 60—Steering and Brake Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble

Section 70—Hydraulic Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble

Section 80—Attachment and Machine-Specific Repair

- Group 05—General Information
- Group 10—Remove and Install
- Group 20—Disassemble and Assemble

Section 90—Operator Station Repair

- Group 05—General Information
- Group 10—Remove and Install

Section 210—General Information - Diagnostics

- Group 05—General Information

Section 211—Diagnostic Trouble Codes

- Group 01—Control Unit ICC

Section 212—System Diagnostics Access

- Group 220—Engine System Diagnostics
- Group 240—Electrical System Diagnostics
- Group 245—Electrical Control Unit Diagnostics
- Group 250—Drivetrain System Diagnostics
- Group 260—Steering and Brake System Diagnostics
- Group 270—Hydraulic System Diagnostics
- Group 280—Attachments and Machine-Specific System Diagnostics

Section 220—Engine System Diagnostics

- Group 05—General Information
- Group 10—Operational and Preliminary Checks
- Group 20—Theory of Operation
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 240—Electrical System Diagnostics

- Group 05—General Information
- Group 20—Theory of Operation
- Group 30—Schematics
- Group 50—Tests and Adjustments
- Group 50A—Diagnostics

Section 245—Electrical Control Unit Diagnostics

- Group 05—General Information
- Group 20—Theory of Operation
- Group 50A—Diagnostics

Section 249—Electrical Connectors

- Group 05—General Information
- Group 40A—Electrical Assembly Connectors
- Group 40B—Sensor Connectors
- Group 40E—Light connectors
- Group 40F—Fuse Connectors
- Group 40G—Charging Connectors
- Group 40M—Motor Connectors
- Group 40S—Switch Connectors
- Group 40W—Terminals

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2024
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2016, 2017, 2018, 2019, 2020, 2021, 2022

Group 40Y—Solenoid Connectors

Section 250—Drivetrain System Diagnostics

Group 20—Theory of Operation
Group 50—Test and Adjustments
Group 50A—Diagnostics

**Section 259—Drivetrain Systems —
Component Information**

Group 05—General Information
Group 40—Components

**Section 260—Steering and Brake System
Diagnostics**

Group 05—General Information
Group 20—Theory of Operation
Group 50—Test and Adjustments
Group 50A—Diagnostics

**Section 269—Steering and Brake Systems
— Component Information**

Group 05—General Information
Group 40—Components

Section 270—Hydraulic System Diagnostics

Group 05—General Information
Group 10—Operational and Preliminary Checks
Group 20—Theory of Operation
Group 30—Schematics
Group 50—Test and Adjustments
Group 50A—Diagnostics

**Section 279—Hydraulic Systems —
Component Information**

Group 05—General Information
Group 40—Components

**Section 280—Attachment and Machine-
Specific System Diagnostics**

Group 05—General Information
Group 50—Test and Adjustments
Group 50A—Diagnostics

**Section 289—Attachment and Machine-
Specific Systems — Component
Information**

Group 05—General Information
Group 40—Components

Section 300—Service Tools and Kits

Group 10—Service Tools

Preview Only

Section 10 General Information

Contents

	Page		Page
Group 10—Safety			
Live With Safety.....	10-10-1	Work in Clean Area	10-10-16
Follow Safety Instructions.....	10-10-1	Work In Ventilated Area.....	10-10-16
Avoid Harmful Asbestos Dust.....	10-10-1	Group 20—General Specifications	
Avoid Heating Near Pressurized		Metric Bolt and Screw Torque	
Fluid Lines	10-10-2	Values.....	10-20-1
Avoid High-Pressure Fluids	10-10-2	Metric Cap Screw Torque	
Avoid Hot Exhaust.....	10-10-2	Values—Grade 7	10-20-2
Avoid Static Electricity Risk When		Unified Inch Bolt and Screw Torque	
Refueling	10-10-3	Values.....	10-20-3
Construct Dealer-Made Tools		Gasket Sealant Application	10-20-4
Safety.....	10-10-3	Group 30—O-Ring Seal Service Recommendations	
Decommissioning — Proper		Face Seal Fittings With Inch Stud	
Recycling and Disposal of Fluids		Ends Torque	10-30-1
and Components	10-10-4	Face Seal Fittings With Metric Stud	
Drain Gasoline When Storing		Ends Torque	10-30-2
Machine	10-10-4	Service Recommendations for Fittings	
Follow Tire Recommendations	10-10-5	Flat Face O-Ring Seal.....	10-30-3
Handle Agricultural Chemicals		Service Recommendations for	
Safety.....	10-10-5	O-Ring Boss Fittings.....	10-30-3
Handle Fluids Safely—Avoid		Group 40—Fuels and Lubricants	
Fires.....	10-10-6	Engine Break-In Oil	10-40-1
Illuminate Work Area Safely	10-10-6	Alternative Lubricants.....	10-40-1
Keep Electronic Control Unit		Synthetic Lubricants	10-40-1
Connectors Clean.....	10-10-6	Mixing of Lubricants.....	10-40-2
Keep ROPS Installed Properly	10-10-7	Group 50—Machine Specifications	
Park Machine Safely.....	10-10-7	Record Identification Numbers	10-50-1
Practice Safe Maintenance.....	10-10-8	Machine Specifications.....	10-50-2
Prepare for Emergencies.....	10-10-8		
Prevent Acid Burns.....	10-10-9		
Prevent Battery Explosions	10-10-9		
Prevent Machine Runaway.....	10-10-10		
Protect Against High Pressure			
Spray	10-10-10		
Recognize Safety Information	10-10-10		
Remove Paint Before Welding or			
Heating	10-10-11		
Service Accumulator Systems			
Safely.....	10-10-11		
Service and Operate Chemical			
Sprayers Safely	10-10-12		
Service Cooling System Safely	10-10-12		
Service Machines Safely	10-10-13		
Service Tires Safely.....	10-10-13		
Servicing Electronic Control Units.....	10-10-13		
Support Machine Properly	10-10-14		
Understand Signal Words.....	10-10-14		
Use Proper Lifting Equipment.....	10-10-14		
Use Proper Tools	10-10-15		
Wait Before Opening			
High-Pressure Fuel System.....	10-10-15		
Wear Protective Clothing.....	10-10-15		
Welding Near Electronic Control			
Units	10-10-16		