

Select Series™ Tractors

X300, X304, X310, X320, X324, X340, X360



TECHNICAL MANUAL

X300 Series

TM2308 18FEB19 (ENGLISH)

Preview Only

John Deere Horicon Works

PRINTED IN U.S.A.




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 10—Safety

Group 05—Safety

Section 20—Specifications

Group 05—General Specifications
Group 10—O-Ring Seal Service Recommendations
Group 15—Fuels and Lubricants
Group 20—Serial Number Locations

Section 30—Engine FH491V

Group 05—Specifications
Group 10—Component Location
Group 15—Theory of Operation
Group 20—Diagnostics
Group 25—General Information
Group 30—Tests and Adjustments
Group 35—Repair

Section 30A—Engine FH661/FH721

Group 05—Specifications
Group 10—Tools and Materials
Group 15—Component Location
Group 20—Theory of Operation
Group 25—Diagnostics
Group 30—General Information
Group 35—Tests and Adjustments
Group 40—Repair

Section 30B—Engine FS541V/FS600V

Group 05—Specifications
Group 10—Component Location
Group 15—Theory of Operation
Group 20—Diagnostics
Group 25—General Information
Group 30—Tests and Adjustments
Group 35—Repair

Section 30C—Engine FS651V

Group 05—Specifications
Group 10—Tools and Materials
Group 15—Component Location
Group 20—Theory of Operation
Group 25—Diagnostics
Group 30—General Information
Group 35—Tests and Adjustments
Group 40—Repair

Section 40—Electrical

Group 05—Information

Group 10—Specifications
Group 15—Schematics and Harnesses (SN -040000)
Group 20—Theory of Operation (SN -040000)
Group 25—Schematics and Harnesses (SN 040001-280000)
Group 30—Theory of Operation (SN 040001-280000)
Group 35—Schematics and Harnesses Export (SN 150001-280000)
Group 40—Theory of Operation Export (SN 150001-280000)
Group 45—Schematics and Harnesses (SN 280001-)
Group 50—Theory of Operation (SN 280001-)
Group 55—Tests and Adjustments
Group 60—Repair

Section 50—Power Train

Group 05—Specifications
Group 10—Component Location
Group 15—Theory of Operation
Group 20—Diagnostics
Group 25—Tests and Adjustments
Group 30—Repair

Section 60—Hydraulics

Group 05—Specifications
Group 10—Component Location
Group 15—Theory of Operation
Group 20—Diagnostics
Group 25—Tests and Adjustments
Group 30—Repair

Section 70—Steering

Group 05—Specifications
Group 10—Component Location
Group 15—Theory of Operation
Group 20—Tests and Adjustments
Group 25—Repair

Section 80—Attachments

Group 05—Specifications
Group 10—Component Location
Group 15—Diagnostics
Group 20—Tests and Adjustments
Group 25—Repair

Section 90—Miscellaneous

Group 05—Specifications
Group 10—Tests and Adjustments
Group 15—Repair

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2011, 2012, 2013, 2014, 2016

Preview Only

Section 10 Safety

Contents

	Page
Group 05—Safety	
Recognize Safety Information	10-05-1
Understand Signal Words.....	10-05-1
Replace Safety Signs	10-05-1
Handle Fluids Safely—Avoid	
Fires.....	10-05-2
Prepare for Emergencies.....	10-05-2
Prevent Battery Explosions	10-05-2
Prevent Acid Burns.....	10-05-3
Wear Protective Clothing.....	10-05-3
Avoid High-Pressure Fluids	10-05-4
Avoid Heating Near Pressurized	
Fluid Lines	10-05-4
Service Machines Safely	10-05-4
Use Proper Tools	10-05-5
Park Machine Safely.....	10-05-5
Support Machine Properly	10-05-5
Use Proper Lifting Equipment.....	10-05-6
Work in Clean Area	10-05-6
Protect Against High Pressure	
Spray	10-05-6
Illuminate Work Area Safely	10-05-7
Work In Ventilated Area.....	10-05-7
Remove Paint Before Welding or	
Heating	10-05-7
Avoid Harmful Asbestos Dust.....	10-05-8
Service Tires Safely.....	10-05-8
Stay Clear of Rotating Drivelines.....	10-05-9
Service Cooling System Safely	10-05-9
Dispose of Waste Properly	10-05-10
Handle Chemical Products Safely.....	10-05-10
Live With Safety.....	10-05-10