

# Compact Utility Tractors 3320, 3520, and 3720 Series with Cab



## TECHNICAL MANUAL

### 3320, 3520 and 3720 Compact Utility Tractor (With Cab), Tractor Repair, Test and Adjustments

TM2365 23JAN13 (ENGLISH)

Preview Only

John Deere Augusta Works  
PRINTER IN U.S.A.



# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the

beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-13MAY13-1/1

Preview Only

# Contents

## Section 10—Safety

Group 05—Safety

## Section 20—Specifications and Information

Group 05—General Specifications  
Group 10—Fuel and Lubricants  
Group 15—Serial Number Locations

## Section 30—Engine—Diesel

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnostics  
Group 25—Tests and Adjustments  
Group 30—Repair

## Section 40—Electrical - North America

Group 05—General Information  
Group 10—Specifications  
Group 15—Component Location  
Group 20—Schematics and Harnesses  
Group 25—Troubleshooting  
Group 30—Operation and Diagnostics  
Group 35—Tests and Adjustments  
Group 40—Service ADVISOR Test and Adjustments

## Section 50—Electrical - EEC

Group 05—European Electrical Section  
Group 10—Specifications  
Group 15—Component Location  
Group 20—Schematics and Harnesses  
Group 25—Troubleshooting  
Group 30—Operation and Diagnostics

## Section 60—Power Train—Hydrostatic

Group 05—Specifications  
Group 10—Component Location  
Group 15—Schematics  
Group 20—Theory of Operation  
Group 25—Diagnostics  
Group 30—Troubleshooting  
Group 35—Tests and Adjustments  
Group 40—Repair

## Section 70—Power Train—Final Drive

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnostics

Group 25—Troubleshooting  
Group 30—Final Drive Troubleshooting  
Group 35—Tests and Adjustments  
Group 40—Repair  
Group 45—PTO Theory of Operation  
Group 50—PTO Repair

## Section 80—Hydraulics

Group 05—Specifications  
Group 10—Component Location  
Group 15—Schematics  
Group 20—Theory of Operation  
Group 25—Troubleshooting  
Group 30—Tests and Adjustments  
Group 35—Repair

## Section 90—Steering

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnostics  
Group 25—Tests and Adjustments  
Group 30—Repair

## Section 100—Brakes

Group 05—Specifications  
Group 10—Component Location  
Group 15—Theory of Operation  
Group 20—Diagnostics  
Group 25—Tests and Adjustments  
Group 30—Repair

## Section 110—HVAC

Group 05—Specifications  
Group 10—Tools and Materials  
Group 15—General Information  
Group 20—Tests and Adjustments

## Section 120—Miscellaneous

Group 05—Specifications  
Group 10—Repair

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2013  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION © Manual  
Previous Editions  
Copyright © 2005, 2006, 2008, 2009, 2011

Preview Only

## Section 10 Safety

### Contents

	Page
<b>Group 05—Safety</b>	
Recognize Safety Information .....	10-05-1
Understand Signal Words.....	10-05-1
Replace Safety Signs .....	10-05-1
Handle Fluids Safely—Avoid	
Fires.....	10-05-2
Prepare for Emergencies.....	10-05-2
Prevent Battery Explosions .....	10-05-2
Prevent Acid Burns.....	10-05-3
Wear Protective Clothing.....	10-05-3
Avoid High-Pressure Fluids .....	10-05-4
Avoid Heating Near Pressurized	
Fluid Lines .....	10-05-4
Service Machines Safely .....	10-05-4
Use Proper Tools .....	10-05-5
Park Machine Safely.....	10-05-5
Support Machine Properly .....	10-05-5
Use Proper Lifting Equipment.....	10-05-6
Work in Clean Area .....	10-05-6
Protect Against High Pressure	
Spray .....	10-05-6
Illuminate Work Area Safely .....	10-05-7
Work In Ventilated Area.....	10-05-7
Remove Paint Before Welding or	
Heating .....	10-05-7
Avoid Harmful Asbestos Dust.....	10-05-8
Service Tires Safely.....	10-05-8
Stay Clear of Rotating Drivelines.....	10-05-9
Service Cooling System Safely .....	10-05-9
Dispose of Waste Properly .....	10-05-10
Handle Chemical Products Safely.....	10-05-10
Live With Safety.....	10-05-10