



DCG

540, 545, 550, 570, 580 and 590 Round Balers

TECHNICAL MANUAL 540, 545, 550, 570, 580 and 590 Round Balers

TM3265 18FEB02 (ENGLISH)

John Deere Arc-lès-Gray
Worldwide Edition
Printed in U.S.A.



TM3265

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections (up to Section 200) tell how to repair the components. Operation and tests sections (from Section 200) help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

ZX,DX,TMIFC -19-01AUG96-1/1

Preview Only

Contents

SECTION 05—Safety

Group 05—Safety Information

SECTION 10—General

Group 10—Serial Numbers
Group 15—Torques for Hardware
Group 20—Lubrication
Group 25—General Information

SECTION 40—Electrical System

Group 05—Connectors
Group 10—Sensors and Switches
Group 15—Actuators
Group 20—BaleMaster Control Monitor (570, 580 and 590)
Group 25—BaleMaster Controller (570, 580 and 590)
Group 30—Manual Twine Control Switch (540, 570 and 580)
Group 35—Bale Monitor (545 and 550)
Group 40—Sound Alarm (540 and 545)

SECTION 50—Power Train

Group 05—Bondioli Powerline
Group 10—Walterscheid Powerline
Group 15—Walterscheid CV Joint
Group 20—Baler Main Drive Shaft
Group 25—John Deere Slip Clutch
Group 30—Shear Bolt Clutch
Group 35—Walterscheid Slip Clutch
Group 40—Cam-Type Cut Out Clutch
Group 45—Comer Gear Case
Group 50—Superior Gear Case (540, 545 and 550)
Group 55—Precutter Gear Case
Group 60—Chain Tension
Group 65—Sprocket Alignment

SECTION 70—Hydraulic System

Group 05—Bale Density Control Valve (540, 545, 570 and 580)
Group 10—Bale Density Control Valve (550 and 590)
Group 15—Hydraulic Cylinders
Group 20—Gate Locking Valve (550 and 590)
Group 25—Hydraulic Twine Arm Control (545 and

550)

Group 30—Hydraulic Twine Operating Instructions (545 and 550)
Group 35—Net Wrapping Hydraulic Components (545 and 550)
Group 40—Precutter Hydraulic Components

SECTION 80—Miscellaneous

Group 05—Wheel and Hub Repair
Group 15—Tongue Repair (540, 545 and 550)
Group 20—Tongue Repair (570, 580 and 590)
Group 25—Gate Latch
Group 30—Bale Size Indicator
Group 35—Bale Shape Sender

SECTION 100A—Pickup Repair

Group 05—1.41 m (4 ft 7 in.) Pickup
Group 10—1.81 m (5 ft 11 in.) Pickup
Group 15—2.20 m (7 ft 3 in.) Pickup
Group 20—Pickup Adjustments
Group 25—Pickup Drive Components

SECTION 100B—Precutter System

Group 05—Adjustment

SECTION 120—Bale Chamber

Group 05—Identification of Rolls
Group 10—Baler Rolls
Group 15—Scraper of Roll
Group 20—Belt Repair
Group 25—Belt Guide for Net Wrapping Device
Group 30—Tension Arm Repair
Group 35—Top Idler Roll Declutchable Drive

SECTION 130A—Net Wrapping System

Group 05—Repair (Baler Up To SN 322399)
Group 10—Repair (Baler From SN 322400)

SECTION 130B—Twine Wrapping System

Group 05—Electrical Wrapping System (540, 570, 580 and 590)
Group 10—Hydraulic Wrapping System (545 and 550)

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT 2002
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996, 1989, 1988, 1986

SECTION 240—Electrical System (570, 580 and 590)

- Group 05—General Information
- Group 06—Test Equipment
- Group 10—Electrical System Diagrams for Road Light
- Group 15—Electrical System / Manual Twine Control
- Group 15A—Electrical Diagram / Manual Twine Control Switch
- Group 15B—Checking Twine Wrapping Function
- Group 15C—Checking Soft Core Function
- Group 20—Electrical System / Electronic Wrapping Control
- Group 20A—Electrical Diagram / Electronic Wrapping Control
- Group 20B—Checking Twine Wrapping Function
- Group 20C—Checking Soft Core Function
- Group 20D—Checking the Bale Oversize and Gate Function
- Group 30—Electrical System / BaleMaster Control
- Group 30A—Electrical Diagrams / BaleMaster Control
- Group 30B—BaleMaster Diagnostic Mode
- Group 30C—Checking BaleMaster Monitor
- Group 30D—Checking Controller Power Supply and Data Link
- Group 30E—Checking Twine Wrapping Function
- Group 30F—Checking Net Wrapping Function
- Group 30G—Checking Twine and Net Wrapping Control Function
- Group 30H—Checking Bale Oversize and Tension Control Function
- Group 30J—Checking Gate Function
- Group 30K—Checking Precutter Function
- Group 30L—Checking Soft Core Function

SECTION 241—Electrical System (540, 545 and 550)

- Group 05—General Information
- Group 06—Test Equipment
- Group 10—Manual Twine Control Switch (540 only)
- Group 15—Sound Alarm (540 and 545)
- Group 20A—Basic Monitor (545 and 550)
- Group 20B—Monitor For Net Wrapping (545 and 550)
- Group 20C—Monitor for Soft Core (545 and 550)
- Group 25—Electrical Diagnostics

SECTION 270—Hydraulic System — Operation and Tests

- Group 05—Safety
- Group 10—General Information
- Group 20—Bale Density / Gate Control — Description

- Group 21—Bale Density / Gate Control — Troubleshooting
- Group 22—Bale Density / Gate Control — Tests
- Group 30—Pickup Lift System (Baler without Precutter)
- Group 40—Precutter Hydraulic System — Description
- Group 41—Precutter Hydraulic System — Tests

SECTION 330A—Net Wrapping — Operation and Tests

- Group 05—Troubleshooting
- Group 10—General Information
- Group 20A—Net Wrapping System — Operation (545 and 550)
- Group 20B—Net Wrapping System — Operation (570, 580 and 590)

SECTION 330B—Twine Wrapping - Operation and Tests

- Group 05—Troubleshooting
- Group 10—General Information
- Group 15—Twine Wrapping System — Operation (545 and 550)
- Group 30—Twine Wrapping System — Tests (545 and 550)

Preview Only

130B

240

241

270

330A

330B

INDX