

572, 582 and 592 Round Balers



DCG

TECHNICAL MANUAL
572, 582 and 592 Round Balers
TM3294 17JUL07 (ANGLAIS)

Preview Only

John Deere Arc-lès-Gray
Worldwide Edition
Printed in Germany




TM3294

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections (up to Section 200) tell how to repair the components. Operation and tests sections (from Section 200) help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

OUCC007,000150B -19-16JUL07-1/1

Preview Only

Contents

SECTION 05—Safety

Group 05—Safety Information

SECTION 10—General

Group 10—Serial Numbers
Group 15—Torques for Hardware
Group 20—Lubrication
Group 25—General Information

SECTION 40—Electrical System

Group 05—Connectors
Group 10—Sensors and Switches
Group 15—Actuators
Group 30—ELS Monitor (Manual Twine Control)
Group 40—ELC Plus Monitor (Electronic Tying Control)
Group 50—BaleTrak and BaleTrak Plus Monitor

SECTION 50—Power Train

Group 10—Walterscheid Powerline
Group 15—Walterscheid CV Joint
Group 20—Baler Main Drive Shaft
Group 30—Shear Bolt Clutch
Group 35—Walterscheid Slip Clutch
Group 40—Cam-Type Cut Out Clutch (S.N. — 06XXXX)
Group 41—Cam-Type Cut Out Clutch (S.N. 06XXXX—)
Group 45—Gear Case (Without Precutter Device)
Group 55—Precutter or MAXICUT Precutter Gear Case
Group 60—Chain Tension
Group 65—Sprocket Alignment

SECTION 60—Braking System — Repair

Group 05—Air Brakes
Group 10—Hydraulic Brakes
Group 15—Brake Shoe and Drum

SECTION 70—Hydraulic System

Group 05—Bale Density Control Valve (572 and 582 Balers)
Group 10—Bale Density Control Valve (592 Baler)
Group 15—Hydraulic Cylinders

Group 20—Gate Locking Valve (592 Baler Only)
Group 40—Precutter or MAXICUT Precutter Hydraulic Components

SECTION 80—Miscellaneous

Group 05—Wheel and Hub Repair
Group 20—Tongue Repair
Group 25—Gate Latch
Group 30—Bale Size Indicator
Group 35—Bale Shape Indicators

SECTION 85—Lubrication System — Repair

Group 05—Drive Chain Lubrication

SECTION 100A—Pickup Repair

Group 05—1.41 m (4 ft 7 in.) Pickup
Group 10—1.81 m (5 ft 11 in.) Pickup
Group 15—2.20 m (7 ft 3 in.) Pickup
Group 20—Pickup Adjustments
Group 25—Pickup Drive Components

SECTION 100B—Precutter

Group 05—Adjustment
Group 10—Repair

SECTION 120—Bale Chamber

Group 05—Identification of Rolls
Group 10—Baler Rolls
Group 15—Scraper of Roll
Group 20—Belt Repair
Group 25—Belt Guide for Net Tying Device
Group 30—Tension Arm Repair
Group 35—Top Idler Roll Declutchable Drive

SECTION 130A—Net Tying System

Group 05—Repair

SECTION 130B—Twine Tying System

Group 05—Electrical Tying System

SECTION 211—Diagnostic Trouble Codes for BaleTrak Control

Group 05—Description

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2007
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 2003, 2002

05

10

40

50

60

70

80

85

100A

100B

05

- Group E00X—Battery Voltage
- Group E10X—Bale Size Potentiometer R2
- Group E11X—Right Bale Shape Potentiometer R4
- Group E12X—Left Bale Shape Potentiometer R3

10

- Group E20X—Twine Actuator M1
- Group E21X—Net Actuator M2
- Group E22X—Soft Core Y1
- Group E23X—Pickup Valve Y4
- Group E24X—Knife Valve Y3
- Group E25X—Reverser Valve Y2

40

- Group E31X—Lower Drive Roll RPM Sensor S6
- Group E32X—Twine Pulley Sensors S7/S8
- Group E40X—Net Switch S4
- Group E41X—Right Gate Switch S1
- Group E42X—Left Gate Switch S2

50

- Group E43X—Oversize Bale Switch S3
- Group E51X—Positive Analog Reference
- Group E60X—EPROM

SECTION 240—Electrical System

- Group 05—General Information
- Group 06—Test Equipment
- Group 10—Road Lights - Europe (up to S.N. 21323)
- Group 11—Road Lights - Europe (from S.N. 21324)
- Group 12—Road Lights - North America
- Group 14—Electrical Diagram / Battery Wiring Harness

70

- Group 15—Electrical System / ELS Monitor (Manual Twine Control)
- Group 15A—Electrical Diagram / ELS Monitor (Manual Twine Control)

80

- Group 15B—Checking Twine Tying Function
- Group 15C—Checking Soft Core Function
- Group 20—Electrical System / ELC Monitor (Electronic Tying Control)
- Group 20A—Electrical Diagram / ELC Monitor (Electronic Tying Control)

85

- Group 20B—Checking Twine Tying Function
- Group 20C—Checking Soft Core Function
- Group 20D—Checking the Bale Oversize and Gate Function

- Group 21—Electrical System / ELC Plus Monitor (Electronic Tying Control)

100A

- Group 21A—Electrical Diagram / ELC Plus Monitor (Electronic Tying Control)

- Group 30—Electrical System / BaleTrak Control
- Group 30A—Electrical Diagram / BaleTrak Control
- Group 30B—Diagnostic Modes

100B

SECTION 250—Lubrication System Operation and Tests

- Group 05—Theory of Operation
- Group 10—Component Location

SECTION 260A—Air Brake System Operation and

Tests

- Group 05—Safety
- Group 20—Air Brake System — Description
- Group 25—Air Brake System — Tests

SECTION 260B—Hydraulic Brake System Operation and Tests

- Group 20—Hydraulic Brake System — Description
- Group 25—Hydraulic Brake System — Tests

SECTION 270—Hydraulic System — Operation and Tests

- Group 05—Safety
- Group 10—General Information
- Group 20—Bale Density / Gate Control — Description
- Group 21—Bale Density / Gate Control — Troubleshooting
- Group 22—Bale Density / Gate Control — Tests
- Group 30—Pickup Lift System (Baler without Precutter)
- Group 40—Precutter or MAXICUT Precutter Hydraulic System — Description
- Group 41—Precutter or MAXICUT Precutter Hydraulic System — Tests

SECTION 330—Net Tying — Operation and Tests

- Group 20—Net Tying System — Operation

SECTION 399—Special Tools — Dealer-Fabricated

- Group 05—Manufacturing the Tools

Preview Only

INDX

130A

130B

211

240

250

260A

260B

270

330