

3040 and 3140 Tractors



JOHN DEERE

TECHNICAL MANUAL

3040 and 3140
Tractors

TM4379 (01MAY86) English

John Deere Werke Mannheim
John Deere Ibérica S.A. Getafe
TM4379 (01MAY86)

LITHO IN U.S.A.
ENGLISH



Preview Only

CONTENTS

SECTION 10 – GENERAL

- Group 00 – Specifications and special tools
- Group 05 – Pre-delivery, delivery and after-sales inspections
- Group 10 – Lubrication and periodic service
- Group 15 – Engine and tractor tune-up
- Group 20 – Tractor separation (on tractors without increased lifting capacity)
- Group 25 – Tractor separation (on tractors with increased lifting capacity)

SECTION 20 – ENGINE

- Group 00 – Specifications
- Group 05 – Radiator

SECTION 30 – FUEL AND AIR INTAKE SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – General information, diagnosing malfunctions
- Group 10 – Fuel tank and water trap
- Group 15 – Cold weather starting aids
- Group 20 – Speed control linkage
- Group 25 – Air cleaner

SECTION 40 – ELECTRICAL SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – Description, diagnosing malfunctions and tests
- Group 10 – Wiring harnesses
- Group 15 – Controls and instruments
- Group 20 – Lighting systems
- Group 25 – Wiring diagrams
- Group 30 – Starting motor
- Group 35 – Alternator

SECTION 50 – POWER TRAIN

- Group 00 – Specifications and special tools
- Group 05 – Description, operation and lubricating system
- Group 10 – Clutch operating linkages
- Group 15 – Engine clutches
- Group 20 – Hi-Lo shift unit
- Group 25 – Creeper transmission
- Group 30 – Transmission shift linkage
- Group 35 – Synchronized transmission and transmission oil pump
- Group 40 – Differential
- Group 45 – Final drives
- Group 50 – Independent PTO
- Group 51 – Front PTO
- Group 55 – Mechanical front wheel drive

Copyright © by
DEERE & COMPANY
European Office
D 68 Mannheim
All rights reserved

CONTENTS (Contd.)

SECTION 60 – STEERING SYSTEM AND BRAKES

- Group 00 – Specifications and special tools
- Group 05 – Hydrostatic Steering (operating pressure: 12000 kPa; 120 bar; 1740 psi)
- Group 06 – Hydrostatic Steering (operating pressure: 15000 kPa; 150 bar; 2180 psi)
- Group 10 – Brakes

SECTION 70 – HYDRAULIC SYSTEM

- Group 00 – Specifications and special tools
- Group 05 – Description, diagnosing malfunctions and pressure tests
- Group 10 – Oil reservoir, filter, valves and oil cooler
- Group 15 – Hydraulic pumps
- Group 20 – Rockshaft
- Group 21 – Front hitch
- Group 25 – Selective control valves (spool type)
- Group 30 – Selective control valves (poppet valve type)
- Group 35 – Hose couplers
- Group 40 – Remote cylinder
- Group 45 – Selective control valves (tractors manufactured in Spain)

SECTION 80 – MISCELLANEOUS

- Group 00 – Specifications
- Group 05 – Front axle
- Group 10 – Belt pulley
- Group 15 – Front and rear wheels
- Group 20 – Axle trailer hitch
- Group 25 – Trailer hitch (height adjustable)

SECTION 90 – OPERATOR'S CABS

- Group 00 – Specifications and special tools
- Group 05 – Air conditioning system
- Group 10 – Ventilation and heating
- Group 15 – Operator's seats
- Group 20 – OPU cab
- Group 25 – SG2 cab
- Group 30 – Roll guard

Section 10

General

CONTENTS OF THIS SECTION

GROUP 00 – SPECIFICATIONS AND SPECIAL TOOLS

	Page
Specifications	00-3
Serial numbers	00-3
Model numbers	00-3
Engine	00-3
Engine clutch	00-4
Cooling system	00-4
Fuel system	00-4
Electrical system	00-5
Synchronized transmission	00-5
Hi-Lo shift unit	00-5
Creeper transmission	00-5
Differential and final drives	00-6
Differential lock	00-6
PTO	00-6
Mechanical front wheel drive	00-6
Hydrostatic front wheel drive	00-7
Hydrostatic steering	00-7
Foot brakes	00-7
Handbrake	00-7
Hydraulic system	00-7
Capacities	00-7
Travel speeds	00-8
Front and rear wheels	00-8
Dimensions and weights	00-8
Predelivery, delivery and after-sales inspections	00-9
Lubrication and service	00-10
Tune-up	00-12
Tractor separation	00-13
Standard torques	00-15
Special tools	00-17

GROUP 05 – PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS

	Page
Tractor storage	05-1
Predelivery inspection	05-2
Delivery inspection	05-10
After-sales inspection	05-10

GROUP 10 – LUBRICATION AND SERVICE

Lubrication and service	10-1
-----------------------------------	------

GROUP 15 – TUNE-UP

Preliminary engine testing	15-1
Dynamometer test	15-1
Testing compression pressure	15-2
Tune-up	15-2
Checking tractor operation	15-8
Standard torques	15-8

GROUP 20 – TRACTOR SEPARATION (Tractors without Increased Lifting Capacity)

Separating between engine and tractor front end	20-1
Removal and installation of engine	20-6
Removal and installation of clutch housing	20-9
Removal and installation of final drives	20-13
Removal and installation of rockshaft	20-19
Removal and installation of operator's cabs	20-22