

# 6200, 6200L, 6300, 6300L, 6400, 6400L, 6500 and 6500L Tractors Repair



JOHN DEERE

## TECHNICAL MANUAL

6200, 6200L, 6300, 6300L, 6400, 6400L,  
6500 and 6500L Tractors Repair

TM4523 (03AUG97) English

FOR COMPLETE SERVICE INFORMATION ALSO SEE:

6200, 6200L, 6300, 6300L, 6400,  
6400L, 6500 AND 6500L TRACTORS  
OPERATION AND TESTS . . . . . TM4524  
FRONT WHEEL DRIVE AXLES . . . . . CTM4509  
DIESEL ENGINES . . . . . CTM8  
ALTERNATORS AND STARTING MOTORS . . . . . CTM77

John Deere Werke Mannheim  
TM4523 (03AUG97)

North American Edition

LITHO IN U.S.A.  
ENGLISH



## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Preview Only

# Contents

## SECTION 05—SAFETY

Group 05—Safety Measures

## SECTION 10—GENERAL INFORMATION

Group 05—Specifications  
Group 10—Tune-Up  
Group 15—Predelivery Inspection

## SECTION 20—ENGINE

Group 00—Removal and Installation

## SECTION 30—FUEL, AIR INTAKE, COOLING AND EXHAUST SYSTEMS

Group 05—Speed Control Linkage  
Group 10—Fuel System  
Group 15—Air Intake System  
Group 20—Cooling System  
Group 25—Cold Weather Starting Aids  
Group 30—Exhaust System

## SECTION 40—ELECTRICAL SYSTEM

Group 05—Connectors  
Group 10—Wiring Harness Routing  
Group 15—Charging Circuit  
Group 20—Starting Circuit  
Group 25—Switches, Relays and Solenoids  
Group 30—Monitoring System  
Group 40—Auxiliary Lighting and Electrical Components  
Group 45—Convenience and Accessory Components

## SECTION 50—SYNCRPLUS TRANSMISSION

Group 00—Removal and Installation of Transmission Components  
Group 01—Summary of Important Specifications  
Group 05—Transmission Shift Controls  
Group 10—Perma Clutch II, Transmission Oil Pump and Valves  
Group 15—Gear Transmission  
Group 20—Creeper Transmission  
Group 25—Range Transmission

## SECTION 55—POWRQUAD TRANSMISSION

Group 00—Removal and Installation of PowrQuad Module  
Group 05—Transmission Shift Controls  
Group 10—PowrQuad Module

## SECTION 56—DRIVE SYSTEMS

Group 00—Component Removal and Installation  
Group 05—U-Jointed Shafts and Torsion Damper  
Group 10A—Front Wheel Drive Clutch up to Transmission Serial No. 114447  
Group 10B—Front Wheel Drive Clutch, Transm. Serial No. 114448 to 161066  
Group 10C—Front Wheel Drive Clutch from Transmission Serial No. 161067  
Group 15—Differential  
Group 20—Hydraulic Pump Drive  
Group 25—Final Drives  
Group 30—Rear PTO Options  
Group 35—Front Implement Drive

## SECTION 60—STEERING AND BRAKES

Group 05—Hydrostatic Steering  
Group 10—Steering Cylinders  
Group 15—Brake Valve  
Group 20—Rear Brakes

## SECTION 70—HYDRAULIC SYSTEM

Group 05—Controls  
Group 10—Hydraulic Pump and Charge Pump  
Group 15—Valves  
Group 20—Rockshaft and Rockshaft Cylinder  
Group 25—Three-Point Hitch  
Group 30—Selective Control Valves and Couplers  
Group 35—Independent Control Valve

## SECTION 80—MISCELLANEOUS

Group 00—Component Removal and Installation  
Group 05—Main Frame  
Group 10—Front Axle  
Group 15—Front and Rear Wheels  
Group 20—Center Link Bracket

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM4523-19-03AUG97

COPYRIGHT© 1997  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1994 Deere & Company

Group 25—Swinging Drawbar

**SECTION 90—OPERATOR STATION**

Group 00—Tilting, Removing and Installing the  
Operator's Cab

Group 05—Controls

Group 10—Air Conditioning System

Group 15—Heating System

Group 20—Seat

Group 25—ROPS and ComfortGard Cab

Group 26—Low Clearance Cab

Group 30—Electronic Hitch Control Components

**SECTION 99—SPECIAL TOOLS**

**(Dealer-Fabricated)**

Group 05—Special Tools (Dealer-Fabricated)

**Index**

Preview Only

# Section 05 SAFETY

## Contents

Page

Group 05—Safety Measures

Preview Only