

# 6200, 6200L, 6300, 6300L, 6400, 6400L, 6500 and 6500L Tractors Operation and Tests



JOHN DEERE

## TECHNICAL MANUAL

6200, 6200L, 6300, 6300L, 6400, 6400L, 6500 and  
6500L Tractors Operation and Tests

 
TM4524 (13MAY97) English

FOR COMPLETE SERVICE INFORMATION ALSO SEE:

6200, 6200L, 6300, 6300L, 6400,  
6400L, 6500 AND 6500L TRACTORS  
REPAIR ..... TM4523  
FRONT WHEEL DRIVE AXLES ..... CTM4509  
ENGINES ..... CTM8  
ALTERNATORS AND STARTING MOTORS ..... CTM77

John Deere Werke Mannheim  
TM4524 (13MAY97)  
North American Edition

LITHO IN U.S.A.  
ENGLISH



## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Preview Only

# Contents

## SECTION 210—SAFETY

Group 05—Safety Precautions

## SECTION 220—ENGINE

Group 10—Engine Tests

## SECTION 230—FUEL, AIR INTAKE AND COOLING SYSTEMS

Group 10—System Diagnosis  
Group 15—System Tests  
Group 20A—Fuel System  
Group 20B—Air Intake System  
Group 20C—Cooling System  
Group 20D—Cold Weather Starting Aids

## SECTION 240—ELECTRICAL SYSTEM

Group 05—System Information  
Group 10—System Diagrams, Cab  
Group 10A—System Diagrams, 2-Post ROPS  
Group 15—Sub-System Diagnostics, Cab  
Group 15A—Sub-System Diagnostics, 2-Post ROPS  
Group 20—References

## SECTION 250—SYNCRPLUS TRANSMISSION

Group 05—Operational Checks  
Group 10—System Diagnosis  
Group 15—System Tests  
Group 20—Theory of Operation - SyncroPlus Transmission  
Group 20A—Theory of Operation - Perma Clutch II  
Group 20B—Theory of Operation - Gear Transmission  
Group 20C—Theory of Operation - Creeper Transmission  
Group 20D—Theory of Operation - Range Transmission

## SECTION 255—POWRQUAD TRANSMISSION

Group 05—Operational Checks  
Group 10—System Diagnosis  
Group 15—Adjustments

Group 20—Theory of Operation - PowrQuad Transmission

## SECTION 256—DRIVE SYSTEMS (Without Transmission)

Group 05—Operational Checks  
Group 10—System Diagnosis  
Group 15—System Tests  
Group 20A—Theory of Operation - Front-Wheel Drive Clutch  
Group 20B—Theory of Operation - Differential  
Group 20C—Theory of Operation - Final Drives  
Group 20D—Theory of Operation - Rear PTO Options

## SECTION 260—STEERING AND BRAKES

Group 05—Operational Checks  
Group 10—System Diagnosis  
Group 15—System Tests  
Group 20—Theory of Operation (Complete System)  
Group 20A—Hydrostatic Steering  
Group 20B—Hydraulic Brakes

## SECTION 270—HYDRAULIC SYSTEM

Group 05—Operational Checks  
Group 10—System Diagnosis  
Group 15—System Tests  
Group 20—Hydraulic System  
Group 20A—Charge Pump  
Group 20B—Hydraulic Pump  
Group 20C—Hydraulic System Valves  
Group 20D—Rockshaft and Lift Cylinders  
Group 20E—Selective Control Valves and Couplers  
Group 20F—Independent Control Valve

## SECTION 290—OPERATOR'S STATION

Group 05—Operational Checks  
Group 10A—Air Conditioning — System Diagnosis

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM4524-19-13MAY97

COPYRIGHT© 1997  
DEERE & COMPANY  
European Office Mannheim  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1994, 1993 Deere & Company

Group 10B—Ventilation and Heater — System  
Diagnosis

Group 10C—Operator's Seat — System  
Diagnosis

Group 20A—Air Conditioning System — Theory  
of Operation

Group 20B—Ventilation and Heater — Theory of  
Operation

**SECTION 299—SPECIAL TOOLS  
(Dealer-Fabricated)**

Group 05—Special Tools (Dealer-Fabricated)

**Index**

Preview Only

**Section 210**  
**SAFETY**

**Contents**

Page

**Group 05—Safety Precautions**

Preview Only