

6010 to 6910S Tractors and SE Tractors Operation and Tests



DCG

TECHNICAL MANUAL 6010 to 6910S Tractors and SE Tractors Operation and Tests Sections 210 to 240-15 TM4552 01APR01 (ENGLISCH)

Preview Only

For complete service information also see:

6010 to 6910S Tractors & SE Tractors, Operation and Tests	
Part 1 of 3: Sections 210 to 240-15	
Part 2 of 3: Sections 240-15A to 245	TM4552
6010 to 6910S Tractors & SE Tractors, Diagnostics	TM4678
6010 to 6610 Tractors & SE Tractors, Repair	TM4559
6810, 6910 & 6910S Tractors, Repair	TM4566
Front Wheel Drive Axles	CTM4509
POWERTECH® Engines	CTM104
Mechanical Fuel Injection Systems	CTM207
Electronic Fuel Injection Systems	CTM170
Alternators and Starting Motors	CTM77

John Deere Werke Mannheim
European Version
Printed in Germany



TM4552

Introduction

Foreword


This "Operation and Test" manual applies to the following types of tractor:

6010, 6110, 6210, 6310, 6410, 6510, 6610, 6810, 6910 and 6910S.

SE tractors 6010, 6110, 6210, 6310, 6410, 6510 and 6610.

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

LX24888,00003DC -19-01MAR01-1/1

Preview Only

Contents

SECTION 210—Safety

Group 05—Safety

SECTION 220—Engine

Group 10—Tests

SECTION 230—Fuel, Air Intake and Cooling Systems

Group 10—System Diagnosis

Group 15—Tests and Adjustments

Group 20A—Fuel System

Group 20B—Air Intake System

Group 20C—Cooling System

Group 20D—Cold-Weather Starting Aids

SECTION 240—Electrical System

Group 05—General

Group 10—Functional Schematics and Wiring Diagrams (6010-6910S)

Group 10A—Functional Schematics and Wiring Diagrams (SE Tractors)

Group 10B—Functional Schematics and Wiring Diagrams (2-Post ROPS)

Group 10C—Functional Schematics and Wiring Diagrams (AutoPowr)

Group 15—Circuit Testing (6010-6910S with Cab)

Group 15A—Sub-System Diagnostics (SE Tractors)

Group 15B—Sub-System Diagnostics (2-Post ROPS)

Group 15C—Circuit Testing (AutoPowr Transmission)

Group 16A—Data BUS Systems

Group 16B—Data BUS Systems — Diagnosis

Group 20—Adjustments

Group 25—Component Testing

SECTION 245—Electronic Control Units

Group 05—Operation and General Information on Diagnostics

Group BCU—BCU References

Group BIF—BIF References

Group ECU—ECU (Level 1) References

Group HCU—HCU References

Group PCU—PCU References

Group PEC—PEC References

Group PLC—PLC References

Group RCU—RCU References

Group SFA—SFA References

Group TCU—TCU References

Group UIC—UIC References

SECTION 250—SyncroPlus Transmission

Group 05—Operational Checkout

Group 10—Troubleshooting

Group 15—Tests and Adjustments

Group 20—SyncroPlus Transmission Operation

Group 20A—Perma Clutch II

Group 20B— Gear Transmission

Group 20C—Creeper Transmission

Group 20D— Range Transmission

SECTION 251—Power Reverser Transmission

Group 05—Operational Checkout

Group 10—Troubleshooting

Group 15—Test and Adjustments

Group 20—Power Reverser Operation

Group 20A—Power Reverser Module

Group 20B—Gear Transmission

SECTION 252—Power Shift Transmission

Group 05—Operational Checkout

Group 10—Troubleshooting

Group 15—Adjustments

Group 20—Theory of Operation

SECTION 253—AutoPowr Transmission

Group 10A—Diagnosis — UIC

Group 10B—Diagnosis — TCU

Group 10C—Diagnosis — PLC

Group 15—Tests and Adjustments

Group 20—Operation

SECTION 255—PowrQuad, PowrQuad Plus and AutoQuad II Transmissions

Group 05—Operational Checkout

Group 10A—POWRQUADTransmission Check

Group 10B—Troubleshooting on PowrQuad Plus and AutoQuad II

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2001
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 1999, 1998

210	<ul style="list-style-type: none"> Group 15—Tests and Adjustments Group 20A—PowrQuad Transmission Operation Group 20B—PowrQuad Plus and AutoQuad II Transmission Operation 	<p>SECTION 299—Special Tools (Dealer-Fabricated) Group 05—Special Tools (Dealer-Fabricated)</p>
220	<ul style="list-style-type: none"> Group 20C—Creeper Transmission Group 20D—Range Transmission 	
	SECTION 256—Drive Systems	
230	<ul style="list-style-type: none"> Group 05—Operational Checkout Group 10—Troubleshooting Group 15—Tests Group 20A—Front-Wheel Drive Clutch Group 20B—Differential Group 20C—Final Drives Group 20D—Rear PTO Options Group 20E—Front PTO 	
240	SECTION 260—Steering and Brakes	
245	<ul style="list-style-type: none"> Group 05—Operational Checkout Group 10—Troubleshooting Group 15—Tests and Adjustments Group 20A—Hydrostatic Steering Group 20B—Hydraulic Brakes Group 20C—Handbrake Group 20D—Hydraulic Trailer Brake Group 20E—Air Brake System 	
250	SECTION 270—Hydraulic System	
251	<ul style="list-style-type: none"> Group 05—Operational Checkout Group 10—PFC Hydraulic System Troubleshooting Group 11—PC Hydraulic System Troubleshooting Group 15—Tests and Adjustments Group 20—PFC Hydraulic System Group 20A—Charge Oil Pump Group 20B—Hydraulic Pumps Group 20C—Valves, Oil Cooler and Filter Group 20D—Rockshaft 	
252	<ul style="list-style-type: none"> Group 20E—Selective Control Valves and Couplers Group 20F—Independent Control Valve (ICV) Group 21—PC Hydraulic System and Components 	
253	SECTION 280—Miscellaneous	
	<ul style="list-style-type: none"> Group 05—TLS Front Axle Operational Checkout Group 10—TLS Front Axle Troubleshooting Group 15—TLS Front Axle Tests and Adjustments Group 20—TLS Front Axle Operation 	
255	SECTION 290—Operators Cab	
	<ul style="list-style-type: none"> Group 05—Operational Checkout Group 10A—Air Conditioner Troubleshooting Group 10B—Ventilation and Heater Troubleshooting Group 10C—Operator’s Seat Troubleshooting Group 20A—Air Conditioner Operation Group 20B—Ventilation and Heating Operation 	

Section 210 Safety

Contents

	Page
Group 05—Safety	210-05-1

Preview Only