 


6403 and 6603 Tractors Repair United States—Canada



TECHNICAL MANUAL 6403 and 6603 Tractors Repair United States—Canada

TM6024 08OCT07 (INGLES)

For complete service information also see:

6403 and 6603 Tractors United States—Canada Diagnosis and Tests	TM6025
POWERTECH® 4.5L & 6.8L Diesel Engines	CTM104
POWERTECH® 4.5L & 6.8L Diesel Engines Mechanical Fuel Systems	CTM207
Alternators and Starting Motors	CTM77
Front Wheel Drive Axles APL, 045 and AS Series	CTM4509

Industrias John Deere S.A. de C.V.
LITHO IN U.S.A.




Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX.TMIFC -19-29SEP98-1/1

Preview Only

Contents

SECTION 10—General Information

- Group 05—Safety
- Group 10—Specifications
- Group 15—Fuel and Lubricants
- Group 20—Serial Number Locations

SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Speed Control Linkage
- Group 15—Air Intake System

SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Harness and Connector Repair
- Group 15—Wiring Harness Routing
- Group 20—Electrical System Components
- Group 25—Auxiliary Lighting Components
- Group 30—Fuses And Relays
- Group 35—Lighting

SECTION 50—Power Train

- Group 00—Towing
- Group 05—Component Removal
- Group 10—PTO
- Group 15—Clutch
- Group 20—Clutch Housing
- Group 25—Transaxle
- Group 30—Differential
- Group 35—Final Drives
- Group 40—MFWD Drop Gearbox

SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Front Axle—2WD
- Group 15—Front Axle—MFWD (AS2035)
- Group 16—Front Axle—MFWD (APL350)
- Group 16A—Technical Data and Adjustment Values
for APL350 ZF Series
- Group 16B—Disassembly
- Group 16C—Assembling the differential
- Group 16D—Pinion depth

- Group 16E—Adjusting the play between the teeth
- Group 16F—Assembling the Housings
- Group 16G—Assembling the Universal Joint
- Group 16H—Planet Carrier
- Group 16I—Assembling the Hydraulic Cylinder
- Group 16J—Convergence Regulation
- Group 20—Brake Repair

SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Lubrication System
- Group 20—Selective Control Valve (SCV)

SECTION 80—Miscellaneous Repair

- Group 05—Hood and Shields
- Group 10—3-Point Hitch
- Group 15—Wheels
- Group 20—Front Support

SECTION 90—Open Operator Station Repair

- Group 05—Seat and Support
- Group 10—ROPS
- Group 15—Operator Platform

SECTION 95—Cab Operator Station Repair

- Group 00—Removal and Installation of Components
- Group 05—Selective Control Valve Cable
Adjustment
- Group 10—Air Conditioning System
- Group 15—Heating System
- Group 20—Seat

SECTION 96—6003 SERIES TOOL KIT (ESSENTIAL TOOL Reference Only)

- Group 05—6003 SERIES TOOL KIT (ESSENTIAL
TOOL Reference Only)

SECTION 99—SPECIAL TOOLS (Dealer-Fabricated)

- Group 05—DEALER-FABRICATED TOOLS

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2007
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual

10

20

30

40

50

60

70

80

90

95

Contents

10

20

30

40

50

60

70

80

90

95

Preview Only

Contents

96

99

INDX

Preview Only