

6100D, 6110D, 6115D, 6125D, 6130D, and 6140D Tractors, Repair Technical Manual (November 2011)



DCG

REPAIR TECHNICAL MANUAL 6100D, 6110D, 6115D, 6125D, 6130D, and 6140D Tractors (November 2011)

TM605019 28NOV11 (ENGLISH)

For complete service information also see:

6100D, 6110D, 6115D, 6125D, 6130D, and 6140D Tractors Diagnostic	TM605119
PowerTech™ 4.5L & 6.8L Diesel Engines	CTM104
PowerTech™ 4.5L & 6.8L Diesel Engines Mechanical Fuel Systems	CTM207
PowerTech E™ 4.5 L & 6.8 L Diesel Engines—Level 16 Electronic Fuel System with Denso HPCR	CTM502
Alternators and Starting Motors	CTM77
Front-Wheel Drive Axles (700 Series)	CTM4820
6000D Series Tractor Transaxle Repair	CTM203

Industrias John Deere S.A. de C.V.

PRINTED IN U.S.A.



TM605019

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-29SEP98-1/1

Preview Only

Contents

Section 10—General Information

- Group 05—Safety
- Group 10—Specifications
- Group 15—Fuel and Lubricants
- Group 20—Serial Number Locations

Section 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

Section 30—Fuel and Air

- Group 05—Fuel System
- Group 10—Speed Control Linkage
- Group 15—Air Intake System

Section 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Connectors
- Group 15—Wiring Harness Routing
- Group 20—Electrical System Components
- Group 25—Auxiliary Lighting Components
- Group 30—Fuses And Relays
- Group 35—Lighting

Section 50—Power Train

- Group 00—Towing
- Group 05—Component Removal
- Group 10—PTO
- Group 15—Clutch
- Group 25—Separation

Section 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Front Axle—2WD
- Group 15—Front Axle—MFWD
- Group 20—Brake Repair

Section 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Oil Cooler
- Group 10—Rockshaft
- Group 15—Lubrication System
- Group 20—Selective Control Valve (SCV)
- Group 25—Mid-Mount Selective Control Valve (SCV)
- Group 30—Hydraulic Trailer Brake Valve

Section 80—Miscellaneous Repair

- Group 05—Hood and Fenders
- Group 10—3-Point Hitch
- Group 15—Wheels

- Group 20—Front Support
- Group 25—Trailer Mounting and Swinging Drawbar

Section 90—Open Operator Station Repair

- Group 05—Seat and Support
- Group 10—ROPS
- Group 15—Operator Platform
- Group 20—Cowl Repair

Section 95—Cab—Operator Station Repair

- Group 00—Removal and Installation of Components
- Group 05—Selective Control Valve Cable Adjustment
- Group 10—Air Conditioning System
- Group 15—Heating System
- Group 20—Seat

Section 99—SPECIAL TOOLS

- Group 05—DEALER-FABRICATED TOOLS
- Group —Service Tools

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication.
The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2011
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION © Manual
Previous Editions
Copyright © 2010

Preview Only

Section 10 General Information

Contents

Page	Page
Group 05—Safety	
Recognize Safety Information	10-05-1
Understand Signal Words	10-05-1
Prevent Machine Runaway	10-05-1
Handle Fluids Safely—Avoid	
Fires	10-05-2
Prevent Battery Explosions	10-05-2
Prepare for Emergencies	10-05-2
Prevent Acid Burns	10-05-3
Handle Agricultural Chemicals	
Safely	10-05-4
Avoid High-Pressure Fluids	10-05-4
Park Machine Safely	10-05-5
Support Machine Properly	10-05-5
Wear Protective Clothing	10-05-5
Work in Clean Area	10-05-6
Service Machines Safely	10-05-6
Work In Ventilated Area	10-05-6
Illuminate Work Area Safely	10-05-7
Replace Safety Signs	10-05-7
Use Proper Lifting Equipment	10-05-7
Construct Dealer-Made Tools	
Safely	10-05-8
Remove Paint Before Welding or	
Heating	10-05-8
Avoid Heating Near Pressurized	
Fluid Lines	10-05-8
Keep ROPS Installed Properly	10-05-9
Service Tires Safely	10-05-9
Avoid Harmful Asbestos Dust	10-05-10
Practice Safe Maintenance	10-05-10
Use Proper Tools	10-05-11
Dispose of Waste Properly	10-05-11
Service Cooling System Safely	10-05-11
Servicing Electronic Control Units	10-05-12
Welding Near Electronic Control	
Units	10-05-12
Keep Electronic Control Unit	
Connectors Clean	10-05-12
Live With Safety	10-05-13
Group 10—Specifications	
General Specifications	10-10-1
Overall Dimensions and Weights	10-10-4
Turning Radius	
2WD Axle	10-10-5
MFWD Axle	10-10-5
Ground Speeds	
Collar Shift (CST) and Top Shaft Synchronized	
(TSS)	10-10-6
PowrReverser Transmission (PRT)	10-10-7
Metric Bolt and Screw Torque	
Values	10-10-8
Unified Inch Bolt and Screw Torque	
Values	10-10-9
How To Dispense/Apply/Assemble	
Gasket Sealants	10-10-9
Face Seal Fittings Assembly	
and Installation—All Pressure	
Applications	10-10-10
Metric Face Seal Fitting Torque	
Chart—Standard Pressure	
Applications	10-10-11
SAE Face Seal Fitting Torque	
Chart—Standard Pressure	
Applications	10-10-12
Metric Face Seal Fitting Torque	
Chart—High Pressure	
Applications	10-10-13
SAE Face Seal Fitting Torque	
Chart—High Pressure	
Applications	10-10-14
Prevent Hydraulic System	
Contamination	10-10-14
Check Oil Lines and Fittings	10-10-15
Group 15—Fuel and Lubricants	
Diesel Fuel	10-15-1
Storing Fuel	10-15-1
Testing Diesel Fuel	10-15-1
Heavy Duty Diesel Engine	
Coolant	10-15-2
Diesel Engine Oil	10-15-3
Transmission and Hydraulic Oil	10-15-4
Fill The Transmission With Oil	10-15-4
Check And Service Transmission	
Regularly	10-15-5
Transaxle—Assembly	
Lubrication	10-15-5
Cold Weather Operation	10-15-5
MFWD Axle and Wheel Hub Oil	10-15-5
Lubricant Storage	10-15-6
Alternative and Synthetic	
Lubricants	10-15-6
Grease (Specific Application)	10-15-6
Grease	10-15-6
Group 20—Serial Number Locations	
Serial Numbers	10-20-1
Product Identification Number	
Location	10-20-1
Engine Serial Number Location	10-20-1

Continued on next page