

# 6100B and 6110B Tractors

## TECHNICAL MANUAL 6100B and 6110B Tractors TM700819 15JAN13 (ENGLISH)

For complete service information also see:

|                                                                        |         |
|------------------------------------------------------------------------|---------|
| PowerTech™ 4.5L & 6.8L Diesel Engines .....                            | CTM104  |
| PowerTech™ 4.5L & 6.8L Diesel Engines<br>Mechanical Fuel Systems ..... | CTM207  |
| Alternators and Starting Motors .....                                  | CTM77   |
| Front Wheel Drive Axles 740, 745, and 750 .....                        | CTM4820 |

约翰迪尔 ( 天津 ) 有限公司  
LITHO IN U.S.A.



# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-29SEP98-1/1

Preview Only

# Contents

## Section 10—General Information

- Group 05—Safety
- Group 10—Specifications
- Group 15—Fuel and Lubricants
- Group 20—Serial Number Locations

## Section 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

## Section 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Speed Control Linkage
- Group 15—Air Intake System

## Section 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Harness and Connector Repair
- Group 15—Wiring Harness Routing
- Group 20—Electrical System Components
- Group 25—Fuses and Relays
- Group 30—Lighting

## Section 50—Power Train

- Group 00—Towing
- Group 05—Component Removal
- Group 10—PTO
- Group 15—Clutch
- Group 20—Clutch Housing
- Group 25—Transaxle
- Group 30—Differential
- Group 35—Final Drives
- Group 40—MFWD Drop Gearbox

## Section 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Front Axle - MFWD
- Group 11—Front Axle - MFWD (APL350)
- Group 11A—Technical Data and Adjustment Values for APL350 ZF Series
- Group 11B—Disassembly
- Group 11C—Assembling the differential
- Group 11D—Pinion depth
- Group 11E—Adjusting the play between the teeth
- Group 11F—Assembling the Housings
- Group 11G—Assembling the Universal Joint
- Group 11H—Planet Carrier
- Group 11I—Assembling the Hydraulic Cylinder
- Group 11J—Convergence Regulation
- Group 15—Brake Repair

## Section 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Lubrication System
- Group 20—Selective Control Valve (SCV) - PARKER
- Group 21—Selective Control Valve (SCV) - DANFOSS

## Section 80—Miscellaneous Repair

- Group 05—Hood and Shields
- Group 10—3-Point Hitch
- Group 15—Wheels
- Group 20—Front Support

## Section 90—Operator Station Repair

- Group 05—Seat and Support
- Group 10—Operator Platform

## Section 99—SPECIAL TOOLS (Dealer-Fabricated)

- Group 05—DEALER-FABRICATED TOOLS

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2013  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION © Manual  
Previous Editions  
Copyright © 2012

Preview Only

## Section 10 General Information

### Contents

|                                        | Page     |                                     | Page     |
|----------------------------------------|----------|-------------------------------------|----------|
| <b>Group 05—Safety</b>                 |          |                                     |          |
| Recognize Safety Information .....     | 10-05-1  | Service Cooling System Safety ..... | 10-05-18 |
| Understand Signal Words.....           | 10-05-1  | Service Accumulator Systems         |          |
| Follow Safety Instructions.....        | 10-05-1  | Safely.....                         | 10-05-19 |
| Prepare for Emergencies.....           | 10-05-2  | Service Tires Safely.....           | 10-05-19 |
| Wear Protective Clothing.....          | 10-05-2  | Service Front-Wheel Drive Tractor   |          |
| Protect Against Noise.....             | 10-05-2  | Safely.....                         | 10-05-19 |
| Handle Fuel Safely—Avoid Fires.....    | 10-05-3  | Tightening Wheel Retaining          |          |
| Handle Starting Fluid Safely .....     | 10-05-3  | Bolts/Nuts .....                    | 10-05-20 |
| Fire Prevention .....                  | 10-05-3  | Avoid High-Pressure Fluids .....    | 10-05-20 |
| In Case of Fire .....                  | 10-05-4  | Do Not Open High-Pressure Fuel      |          |
| Keep ROPS Installed Properly .....     | 10-05-4  | System.....                         | 10-05-20 |
| Use Foldable ROPS and Seat Belt        |          | Store Attachments Safely .....      | 10-05-21 |
| Properly .....                         | 10-05-4  | Dispose of Waste Properly .....     | 10-05-21 |
| Stay Clear of Rotating Drivelines..... | 10-05-5  | Handle Fluids Safely—Avoid          |          |
| Use Steps and Handholds                |          | Fires.....                          | 10-05-21 |
| Correctly .....                        | 10-05-5  | Prevent Battery Explosions .....    | 10-05-22 |
| Read Operator Manuals for              |          | Prevent Acid Burns.....             | 10-05-22 |
| ISOBUS Implements .....                | 10-05-5  | Work in Clean Area .....            | 10-05-23 |
| Use Seat Belt Properly .....           | 10-05-6  | Service Machines Safely .....       | 10-05-23 |
| Operating the Tractor Safely .....     | 10-05-7  | Illuminate Work Area Safely .....   | 10-05-23 |
| Avoid Backover Accidents .....         | 10-05-8  | Replace Safety Signs .....          | 10-05-24 |
| Limited Use in Forestry Operation..... | 10-05-8  | Use Proper Lifting Equipment.....   | 10-05-24 |
| Operating the Loader Tractor           |          | Construct Dealer-Made Tools         |          |
| Safely.....                            | 10-05-8  | Safely.....                         | 10-05-24 |
| Keep Riders Off Machine .....          | 10-05-9  | Avoid Harmful Asbestos Dust.....    | 10-05-25 |
| Instructional Seat.....                | 10-05-9  | Use Proper Tools .....              | 10-05-25 |
| Use Safety Lights and Devices.....     | 10-05-9  | Service Cooling System Safely ..... | 10-05-25 |
| Transport Towed Equipment at           |          | Live With Safety.....               | 10-05-26 |
| Safe Speeds .....                      | 10-05-10 |                                     |          |
| Use Caution On Slopes and              |          | <b>Group 10—Specifications</b>      |          |
| Uneven Terrain .....                   | 10-05-10 | Machine Specifications and          |          |
| Freeing a Mired Machine.....           | 10-05-11 | Capacities .....                    | 10-10-1  |
| Avoid Contact with Agricultural        |          | Machine Dimensions and              |          |
| Chemicals.....                         | 10-05-11 | Weights.....                        | 10-10-3  |
| Handle Agricultural Chemicals          |          | Ground Speeds Estimates.....        | 10-10-4  |
| Safely.....                            | 10-05-12 | Metric Bolt and Screw Torque        |          |
| Handling Batteries Safely .....        | 10-05-13 | Values.....                         | 10-10-5  |
| Avoid Heating Near Pressurized         |          | Unified Inch Bolt and Screw Torque  |          |
| Fluid Lines .....                      | 10-05-13 | Values .....                        | 10-10-6  |
| Remove Paint Before Welding or         |          | Sealants and Adhesives              |          |
| Heating .....                          | 10-05-14 | Cross-Reference Chart.....          | 10-10-7  |
| Handle Electronic Components           |          | How To Dispense/Apply/Assemble      |          |
| and Brackets Safely.....               | 10-05-14 | Gasket Sealants .....               | 10-10-8  |
| Practice Safe Maintenance.....         | 10-05-15 | Prevent Hydraulic System            |          |
| Avoid Hot Exhaust.....                 | 10-05-15 | Contamination .....                 | 10-10-8  |
| Clean Exhaust Filter Safely .....      | 10-05-16 | Check Oil Lines and Fittings.....   | 10-10-8  |
| Work In Ventilated Area .....          | 10-05-17 |                                     |          |
| Support Machine Properly .....         | 10-05-17 | <b>Group 15—Fuel and Lubricants</b> |          |
| Prevent Machine Runaway.....           | 10-05-17 | Diesel Fuel.....                    | 10-15-1  |
| Park Machine Safely.....               | 10-05-18 | Storing Fuel .....                  | 10-15-1  |
| Transport Tractor Safely .....         | 10-05-18 | Testing Diesel Fuel .....           | 10-15-1  |

Continued on next page