

S540, S550, S660, S670 and S680 Combine Repair



REPAIR TECHNICAL MANUAL S540, S550, S660, S670, S680 and S690 Combines

TM803819 21 JUL 15 (INGLÊS)

For complete service information also see:

S540, S550, S660, S670, S680 and S690 Combine Diagnostic Technical Manual	TM803919
Alternators and Starting Motors	CTM77
PowerTech 4.5L and 6.8L Diesel Engines Level 12 Electronic Fuel Systems With Stanadyne DE10 Pump.....	CTM331
PowerTech 4.5L and 6.8L Diesel Engines Level 14 Electronic Fuel Systems With Denso HPCR	CTM320
PowerTech 9.0L Diesel Engine Level 14 Electronic Fuel System With Denso HPCR	CTM385
PowerTech 13.5L Diesel Engine Level 15 Electronic Fuel System With Delphi EUIs	CTM370
100 Series Hydraulic Cylinders	CTM103519
120 Series Hydraulic Cylinders	CTM114319

John Deere Horizontina
LITHO IN U.S.A.



Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-15APR14-1/1

Preview Only

Contents

Section 10—General

- Group 05—Safety
- Group 10—Specifications
- Group 15—Tune-Up and Adjustment
- Group 20—Fuels and Lubricants

Section 20—Engine

- Group 05—Remove and Install Engine
- Group 10—Cooling System

Section 30—Fuel and Air

- Group 05—Air Intake System
- Group 10—Diesel Fuel System

Section 40—Electrical System

- Group 05—Batteries
- Group 10—Harness and Connector Repair
- Group 15—Wire Harness Routing
- Group 20—Controllers and Power Distribution
- Group 25—Lighting
- Group 30—Operators Station
- Group 35—Sensors and Switches
- Group 40—Wiper
- Group 45—Alternator
- Group 50—Starting Motor
- Group 55—GreenStar Components

Section 50—Power Train

- Group 05—Transmission and Differential—Three Speed Transmission
- Group 10—Transmission and Differential—Two-Range Automatic Transmission
- Group 15—Hydrostatic Drive Pump—Two-Range Automatic Transmission
- Group 20—Hydrostatic Drive Motor—Two-Range Automatic Transmission
- Group 25—Single Reduction Final Drive
- Group 30—Cam Lobe Motor
- Group 35—Tires and Wheels

Section 60—Steering and Brakes

- Group 05—Steering
- Group 10—Brakes
- Group 15—Brakes—Two-Range Automatic Transmission

Section 70—Hydraulic System

- Group 05—Hydraulic Reservoir
- Group 10—Hydraulic Motors and Pumps

- Group 15—Hydraulic Valves
- Group 20—Hydraulic Cylinders
- Group 25—Accumulators

Section 80—Separator Shell

- Group 05—Gull Wing Doors
- Group 10—Fiberglass Repair

Section 90—Operator Station

- Group 05—Air Conditioning System (R134a)
- Group 10—System Components
- Group 15—Cab

Section 110—Feeder House

- Group 05—Conveyor
- Group 10—Top Shaft and Slip Clutch
- Group 15—Feeder House Drives and Reverser Gear Case
- Group 20—Fore Aft and Lateral Tilt Frame
- Group 25—Five Speed Feeder House Drive Gear Case

Section 120—Separator

- Group 05—Separator Repair
- Group 10—Separator Drives
- Group 15—Residue Disposal
- Group 20—Conveyor Augers, Cleaning Fan and Chaffer and Sieve Frame
- Group 25—Tailings Elevator and Augers
- Group 30—Primary Countershaft Gear Case
- Group 35—Header Electromagnetic Clutch

Section 130—Grain Tank and Unloading System

- Group 05—Grain Tank Cross Augers
- Group 10—Unloading Auger System Drives
- Group 15—Vertical Unloading Auger and Lower Gear Case
- Group 20—Horizontal Unloading Auger and Gear Case
- Group 25—Clean Grain Elevator

Section 140—Engine Gear Case and Control Valve

- Group 05—Engine Gear Case and Valve

Section 199—Dealer Fabricated Tools

- Group 05—Dealer Fabricated Tools

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2015
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2014

Preview Only

Section 10 General

Contents

	Page		Page
Group 05—Safety			
Recognize Safety Information	10-05-1	Unloading	10-10-7
Understand Signal Words.....	10-05-1	Turning Radius	10-10-8
Remove Paint Before Welding or Heating	10-05-1	Weight	10-10-8
Handle Fluids Safely—Avoid Fires.....	10-05-2	Capacities.....	10-10-9
Prevent Battery Explosions	10-05-2	Dimensions.....	10-10-10
Handling Batteries Safely	10-05-3	Unified Inch Bolt and Screw Torque Values	10-10-22
Prepare for Emergencies.....	10-05-3	Metric Bolt and Screw Torque Values	10-10-23
Prevent Acid Burns.....	10-05-4	Sealants and Adhesives Cross-Reference Chart.....	10-10-24
Avoid High-Pressure Fluids	10-05-4	Face Seal Fittings Assembly and Installation—All Pressure Applications	10-10-25
Service Accumulator Systems Safely.....	10-05-5	Metric Face Seal and O-Ring Stud End Fitting Torque Chart—Standard Pressures	10-10-26
Wait Before Opening High-Pressure Fuel System.....	10-05-5	Metric Face Seal and O-Ring Stud End Fitting Torque Chart—High Pressure Applications.....	10-10-27
Park Machine Safely.....	10-05-5	SAE Face Seal and O-Ring Stud End Fitting Torque Chart—Standard Pressures	10-10-28
Support Machine Properly	10-05-6	SAE Face Seal and O-Ring Stud End Fitting Torque Chart—High Pressure Applications.....	10-10-29
Wear Protective Clothing.....	10-05-6	Four Bolt Flange Fittings Assembly and Installation—All Pressure Applications	10-10-30
Service Machines Safely	10-05-6	SAE Four Bolt Flange Cap Screw Torque Values—Standard Pressure Applications	10-10-30
Work In Ventilated Area.....	10-05-7	SAE Four Bolt Flange Cap Screw Torque Values—High Pressure Applications	10-10-31
Illuminate Work Area Safely	10-05-7		
Replace Safety Signs	10-05-7	Group 15—Tune-Up and Adjustment	
Use Proper Lifting Equipment.....	10-05-8	Tune-Up and Adjustment.....	10-15-1
Service Tires Safely.....	10-05-8	Care and Maintenance of Belts	10-15-2
Avoid Harmful Asbestos Dust.....	10-05-9	Defective Belts.....	10-15-3
Work in Clean Area	10-05-9	Prevent Hydraulic System Contamination	10-15-4
Practice Safe Maintenance.....	10-05-10	Check Oil Lines and Fittings.....	10-15-5
Use Proper Tools.....	10-05-10	Basic Electrical Component Handling / Precautions For Vehicles Equipped With Computer Controlled Systems.....	10-15-6
Construct Dealer-Made Tools Safely.....	10-05-11		
Avoid Heating Near Pressurized Fluid Lines	10-05-11	Group 20—Fuels and Lubricants	
Dispose of Waste Properly	10-05-11	Handle Fuel Safely—Avoid Fires.....	10-20-1
Use Adequate Service Facilities.....	10-05-12	Fuel Tank—Filling	10-20-1
Live With Safety.....	10-05-12		
Servicing Electronic Control Units.....	10-05-12		
Welding Near Electronic Control Units	10-05-13		
Precautions for Welding	10-05-13		
Keep Electronic Control Unit Connectors Clean	10-05-14		
Clean Exhaust Filter Safely	10-05-15		
Group 10—Specifications			
Engine	10-10-1		
Electrical System.....	10-10-3		
Transmission and Brakes	10-10-3		
Feeding.....	10-10-4		
Separator.....	10-10-5		
Discharge	10-10-6		
Elevators and Cleaning Fan	10-10-7		

Continued on next page